

6U Rack Shelf Assembly Instructions











For products:
Aligo
IQS4

Engineering the **world's best** visual solutions


EXCELLENCE BY DESIGN

Contents

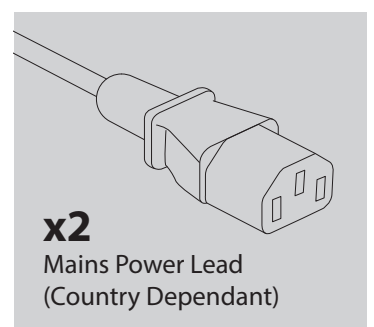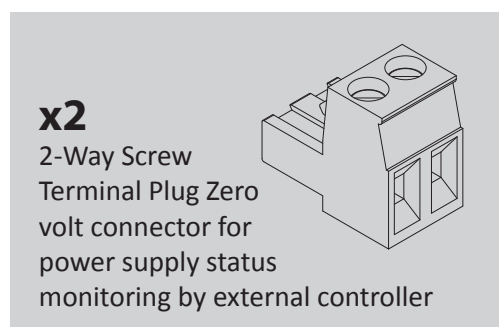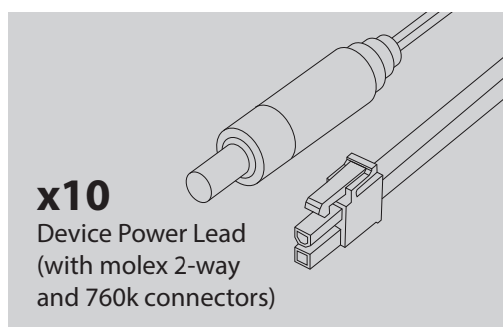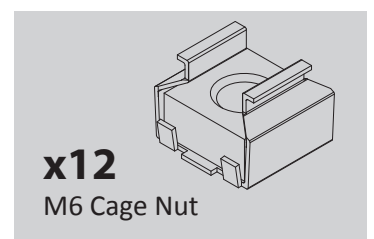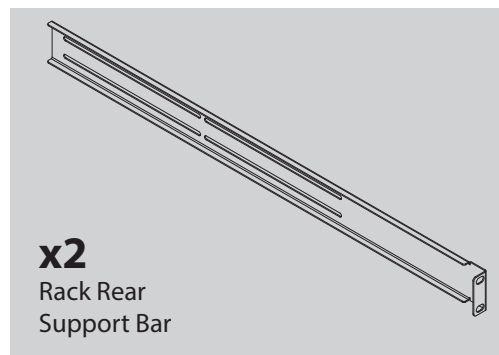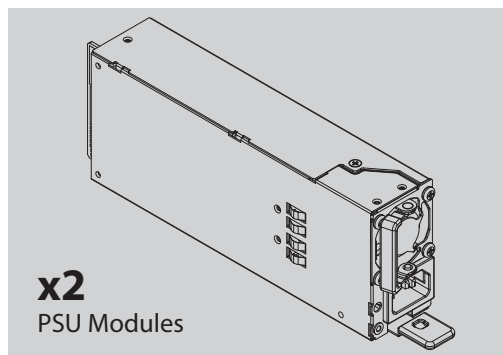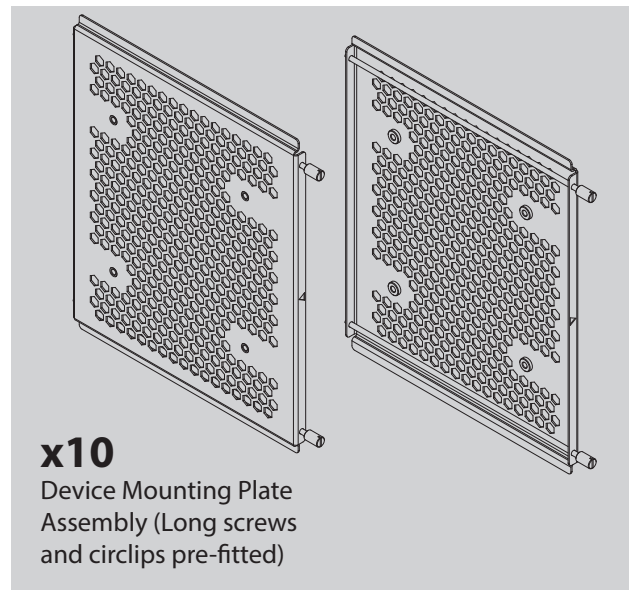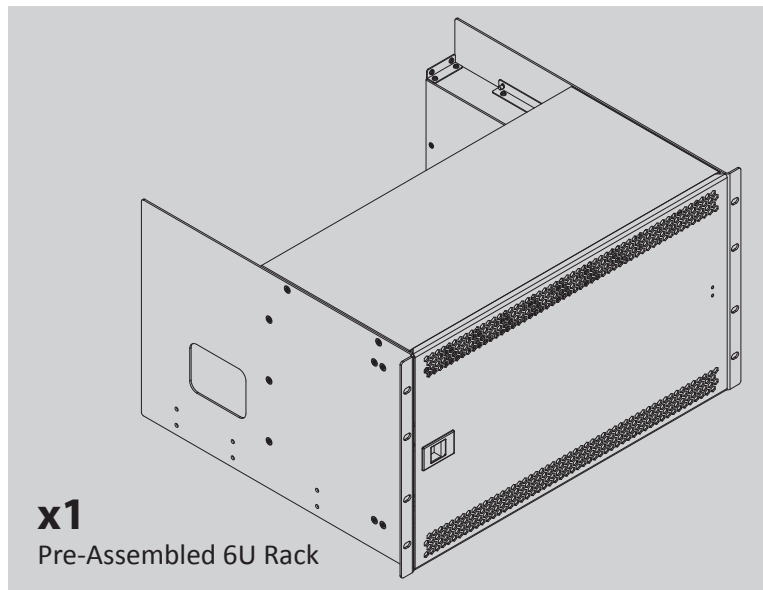

TOOLS NEEDED TO ASSEMBLE RACK:

- 1 x Cross Head Screwdriver
- 1 x Pozi Head Screwdriver
- 1 x Flat Head Screwdriver (Note: Only needed if using the volt free contact connector)


Assembly and Fitting Instructions

1

Unpack the rack and the accessories, checking the contents.



2

Push M6 caged nuts into the 19" cabinet front and rear.

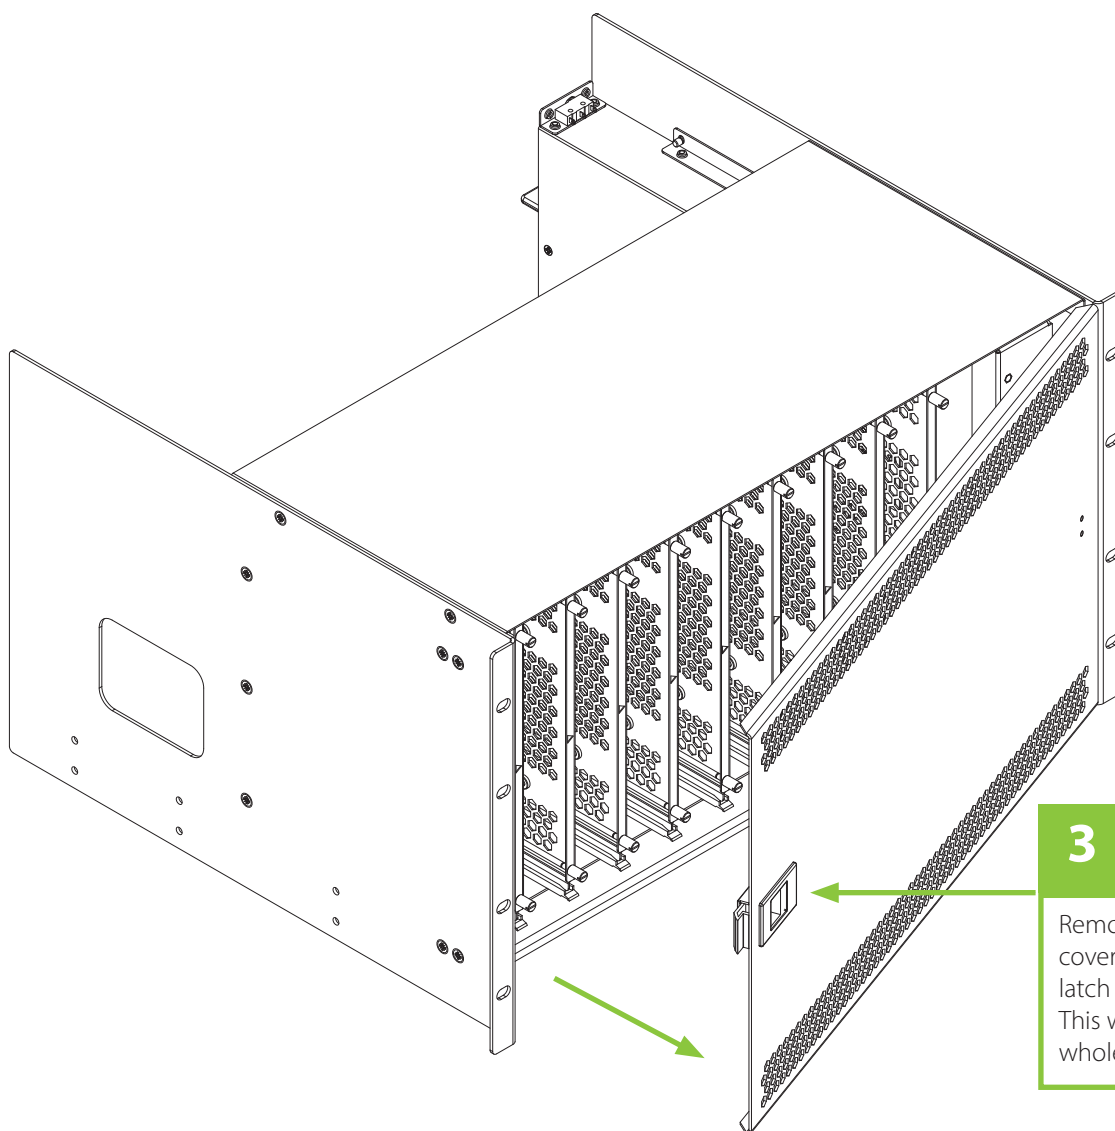

3

Remove the front cover by pushing the latch (to the right). This will release the whole panel.


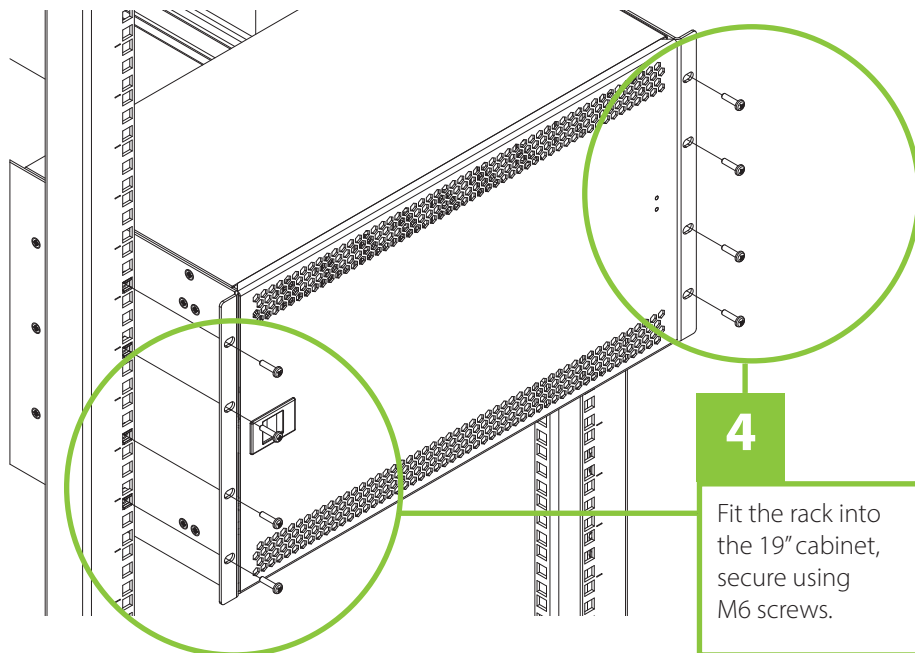
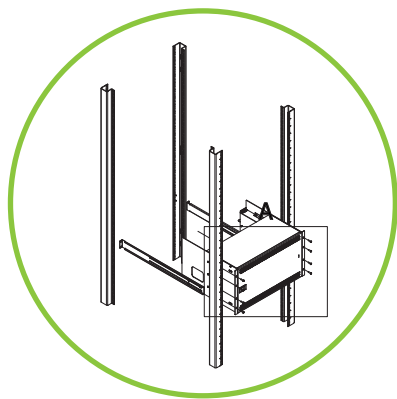


4

Fit the rack into the 19" cabinet, secure using M6 screws.

5

It's recommended to provide extra stability by fitting the rear supports to the rack on each side using M4 screws.

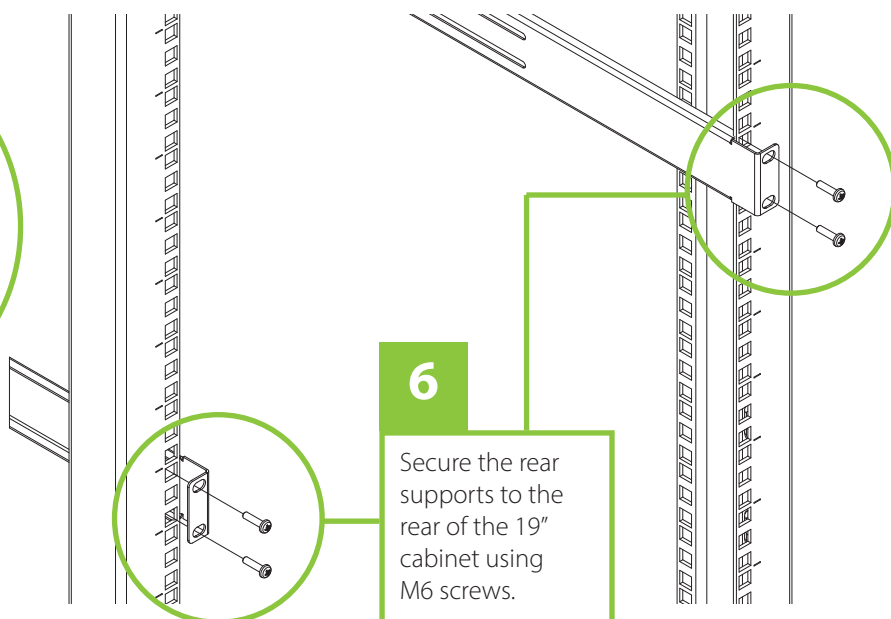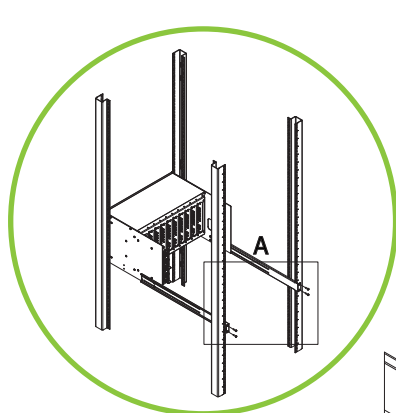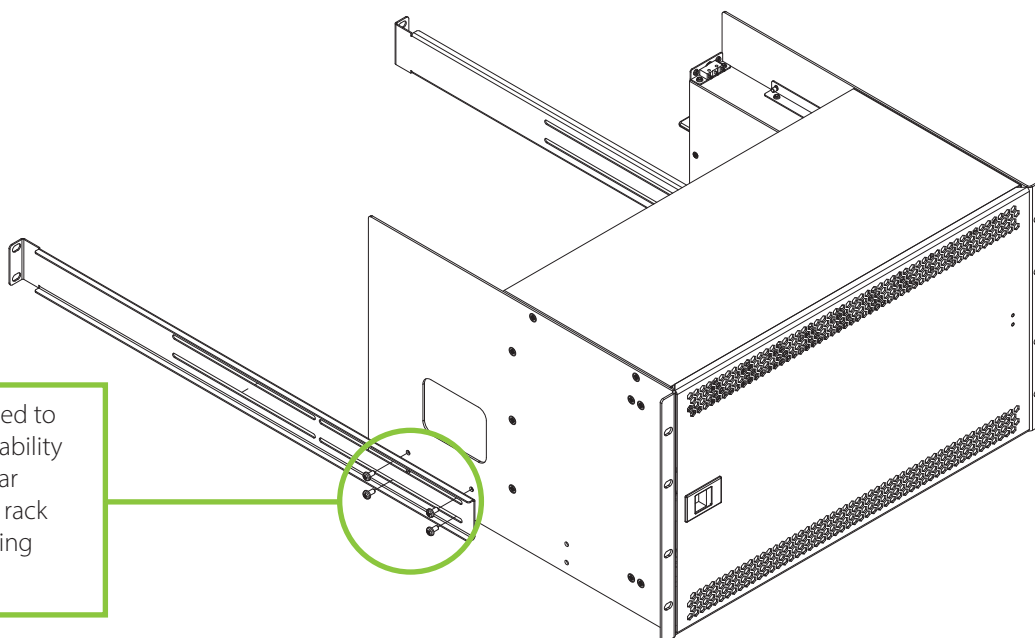


6

Secure the rear supports to the rear of the 19" cabinet using M6 screws.



7

Insert the PSU modules until they click into place.

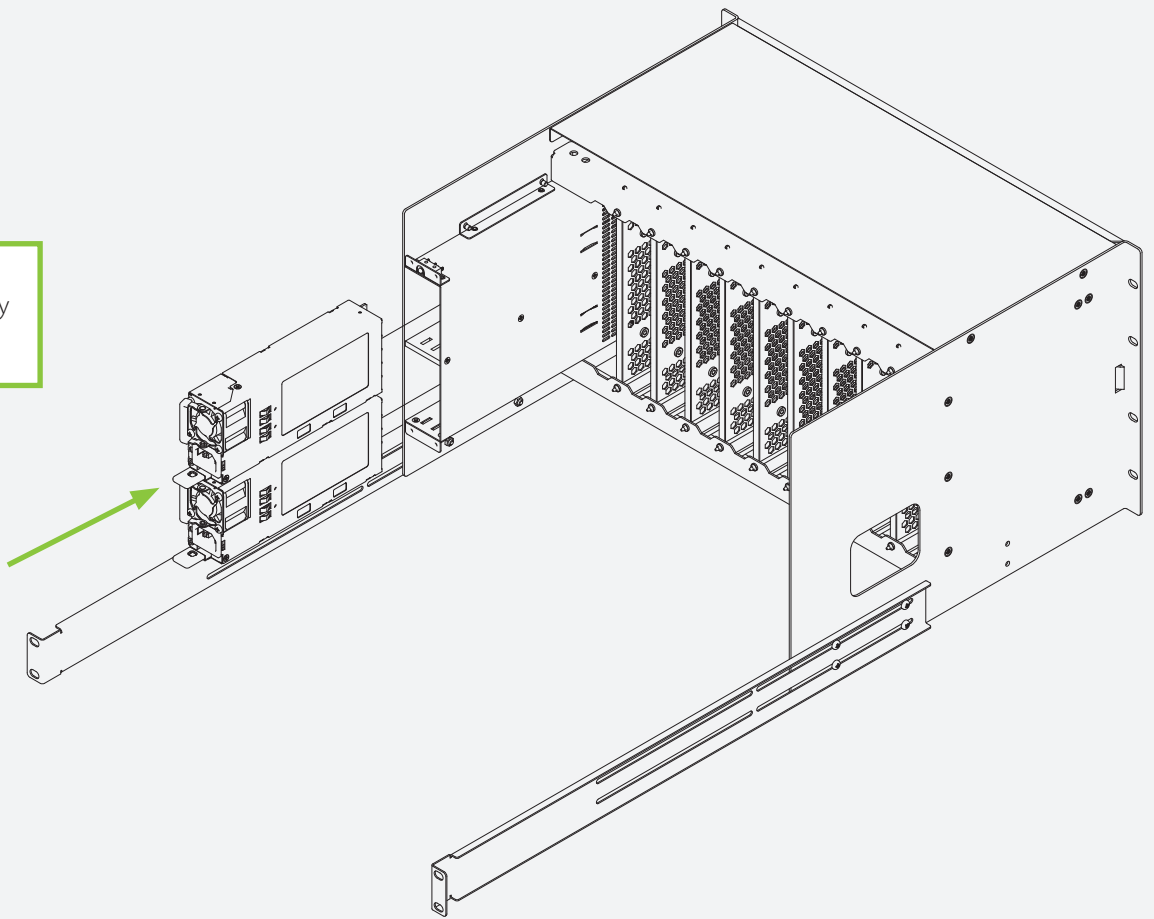


8

If the automatic power supply fail warning is desired: wire the normally open contacts to the cabinet alarm system. '12V status' contacts open when all power is lost. '1+1 PSU status' contacts open when either PSU module fails.

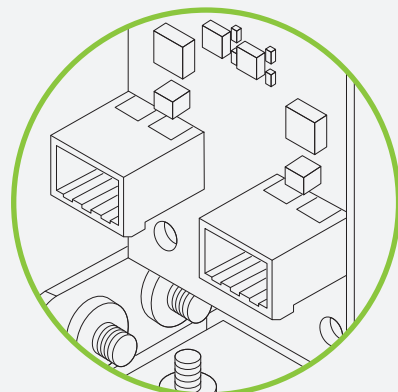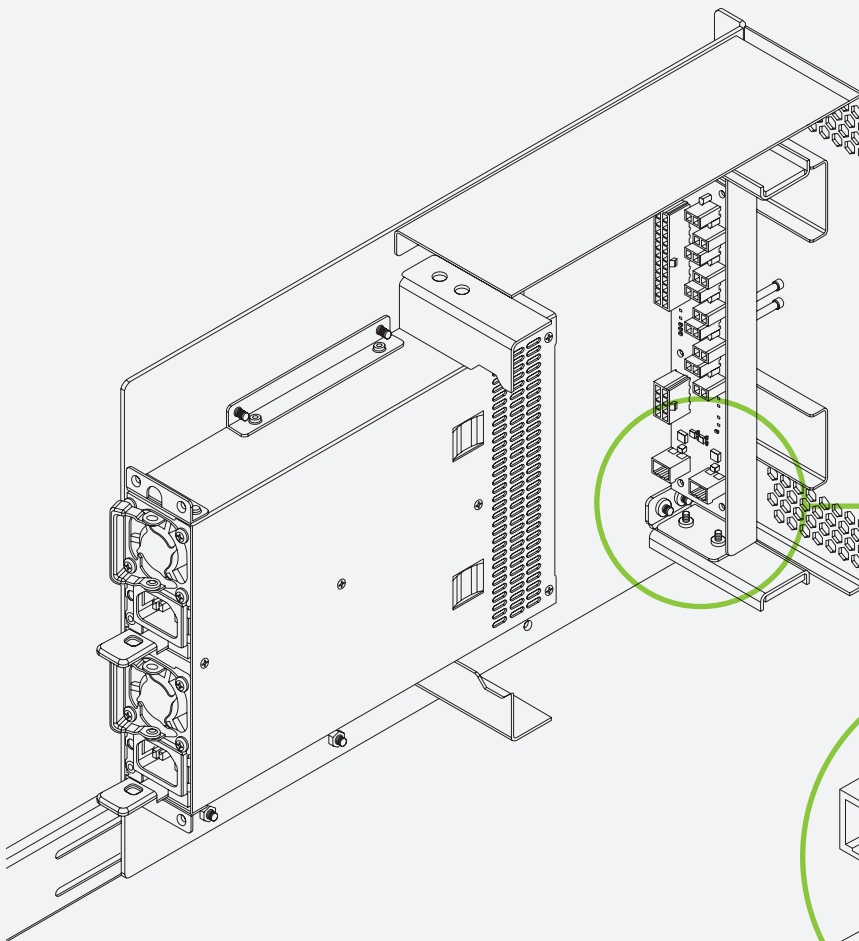


9

Connect the individual unit power supply connectors. If not connected, connect the individual unit power supply connectors to the PCB as shown and to the individual unit.

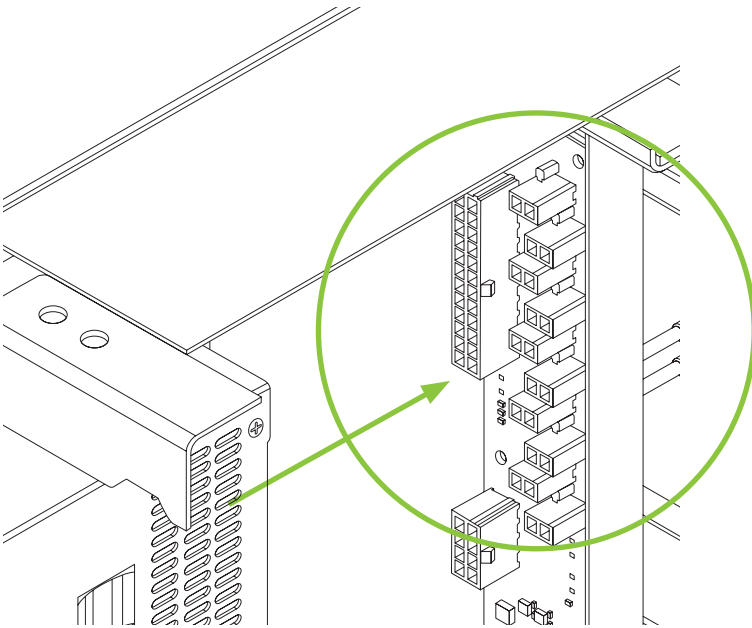


10

Fit the Aligo/IQS4 units to the backing plates using 35mm M4 screws.

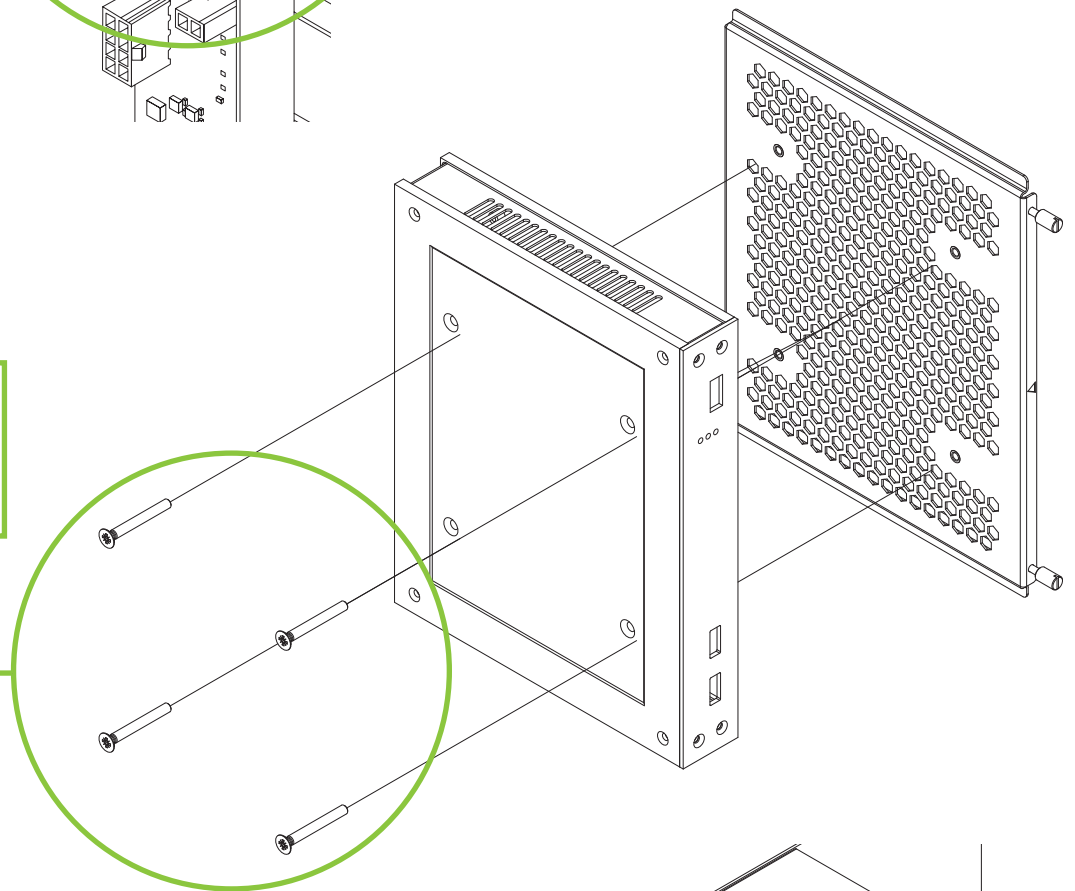

11

Slide the units into the rack, making sure the screw is lined up to the hole and screw in place to securely attach on. To ensure proper airflow through the system, please ensure all units are mounted in the orientation as illustrated. The Datapath logo should be towards the top.

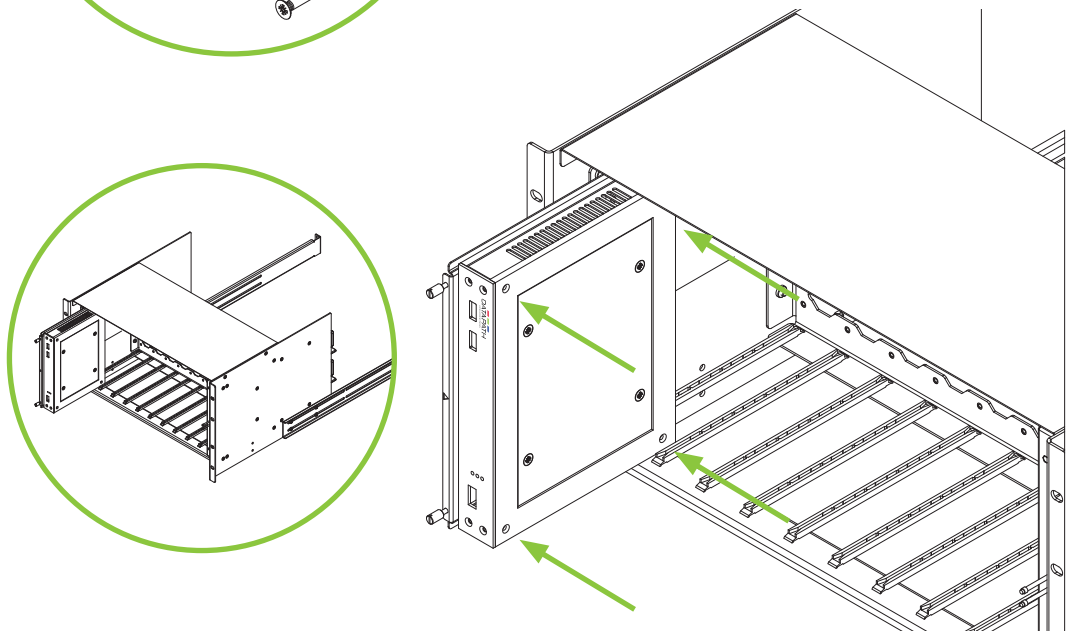

12

Connect both rack power supplies to the mains using the supplied mains leads.

13


Switch the power on.

14

Check the two LED indicators on the front are working. Both lights should appear on. Note: under normal circumstances both the 'power' and 'backup power' lights should be on, indicating that the system is in dual redundant mode and backup power is available. If only one working power supply is detected, then only the primary power LED will be lit up.

15

On the rear of the unit, check that both the PSUs are working. Both LEDs should appear on.

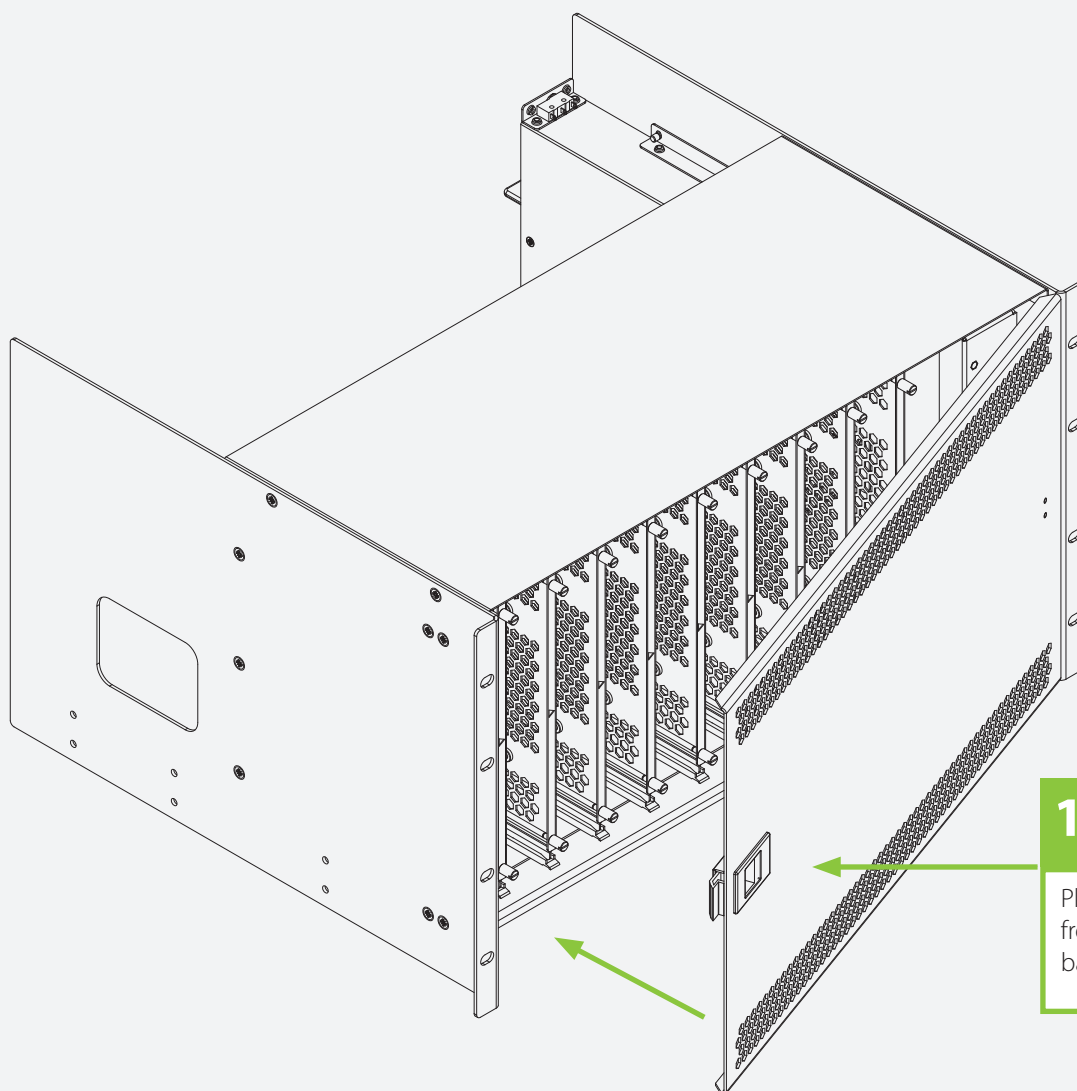

16

Place the rack front cover back on.

**Datapath UK and
Corporate Headquarters**
Bemrose House, Bemrose Park,
Wayzgoose Drive, Derby,
DE21 6XQ, United Kingdom

☎ +44 (0) 1332 294 441
✉ sales-uk@datapath.co.uk

www.datapath.co.uk

Datapath North America
2490 General Armistead Ave,
Suite 102, Norristown,
PA 19403,
USA

☎ +1 484 679 1553
✉ sales-us@datapath.co.uk

