


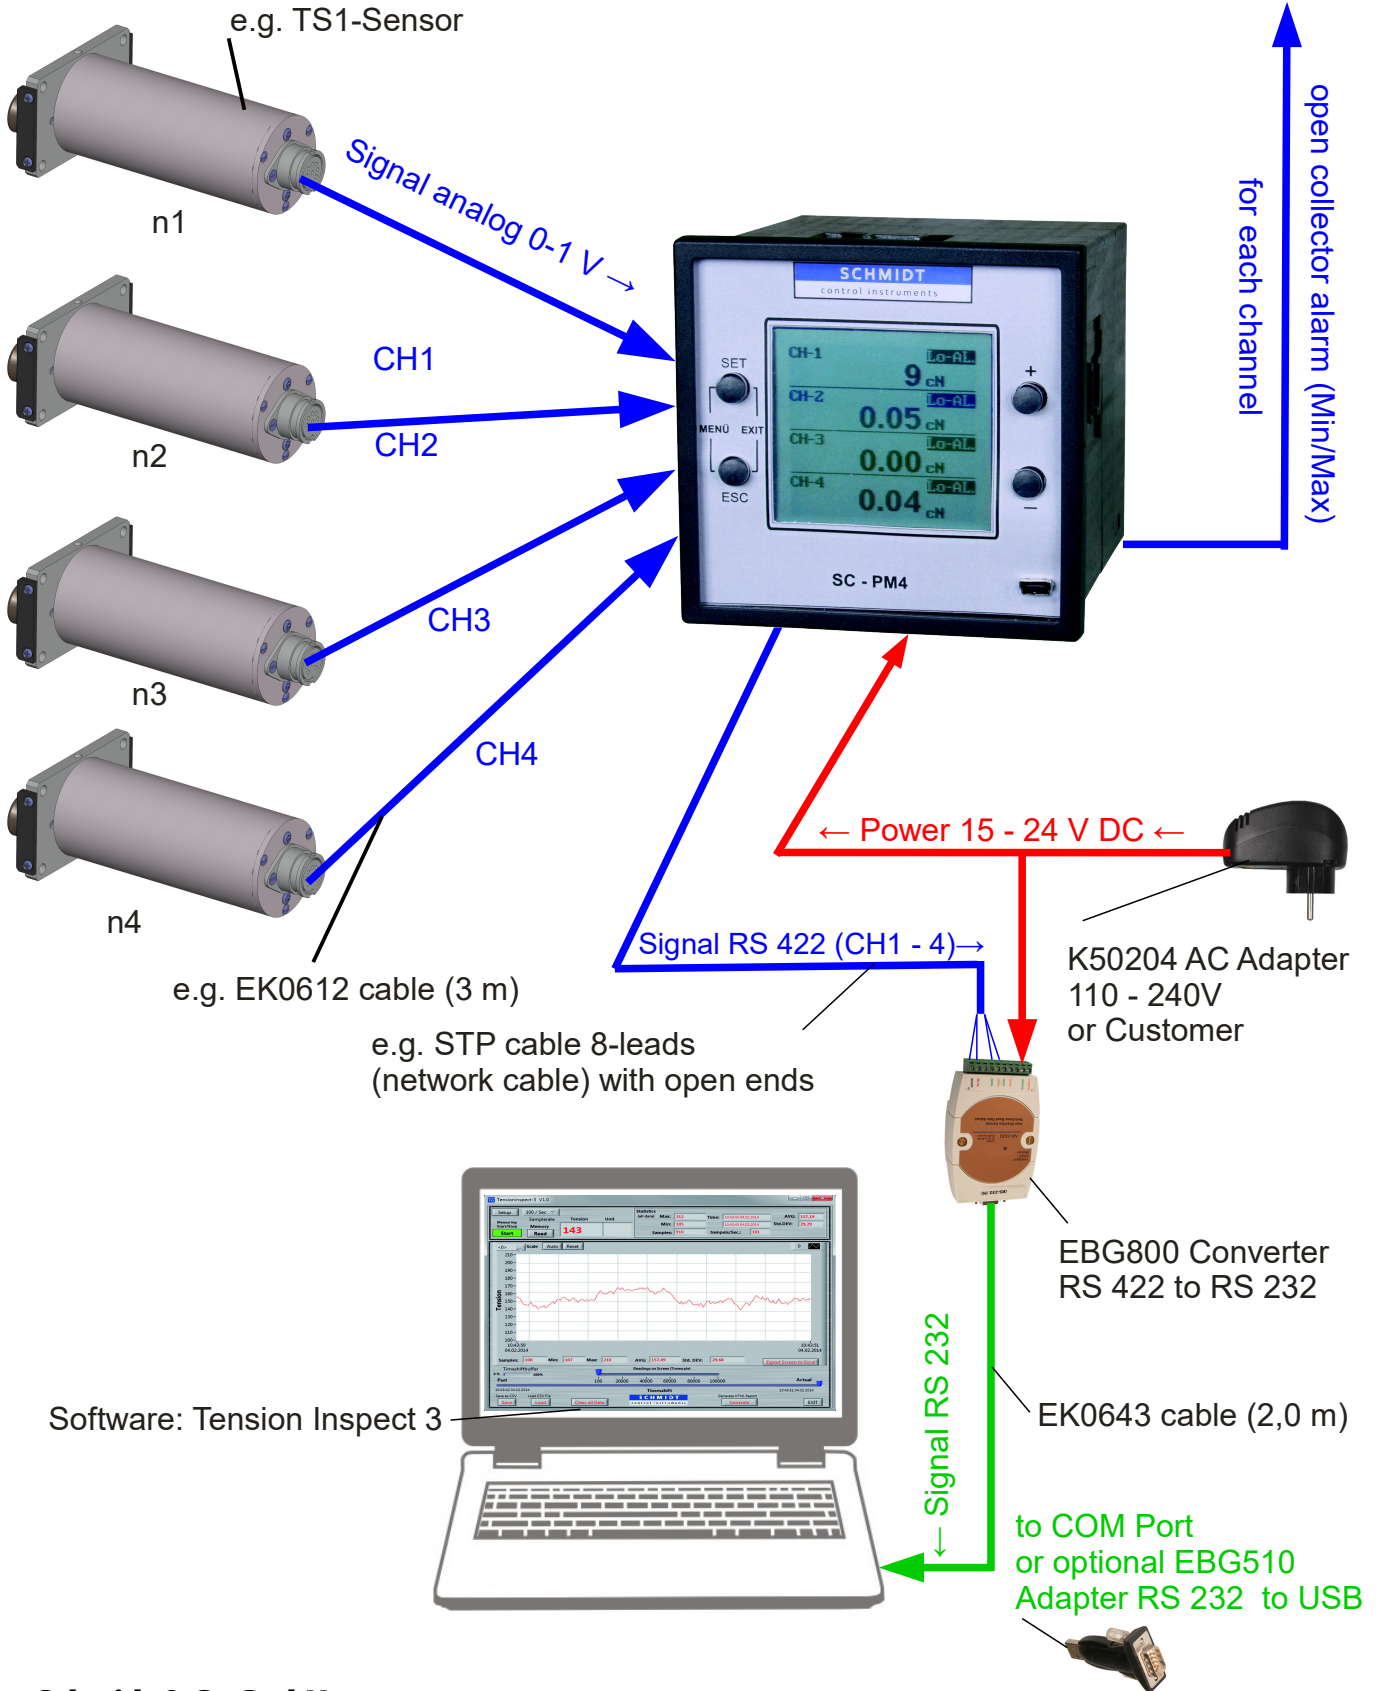

max. 4xTS1 – Sensor to SC-PM4 to PC


outputs: RS 422 and alarm





max. 4xFS1 – Sensor to SC-PM4 to PC

outputs: RS 422 and alarm

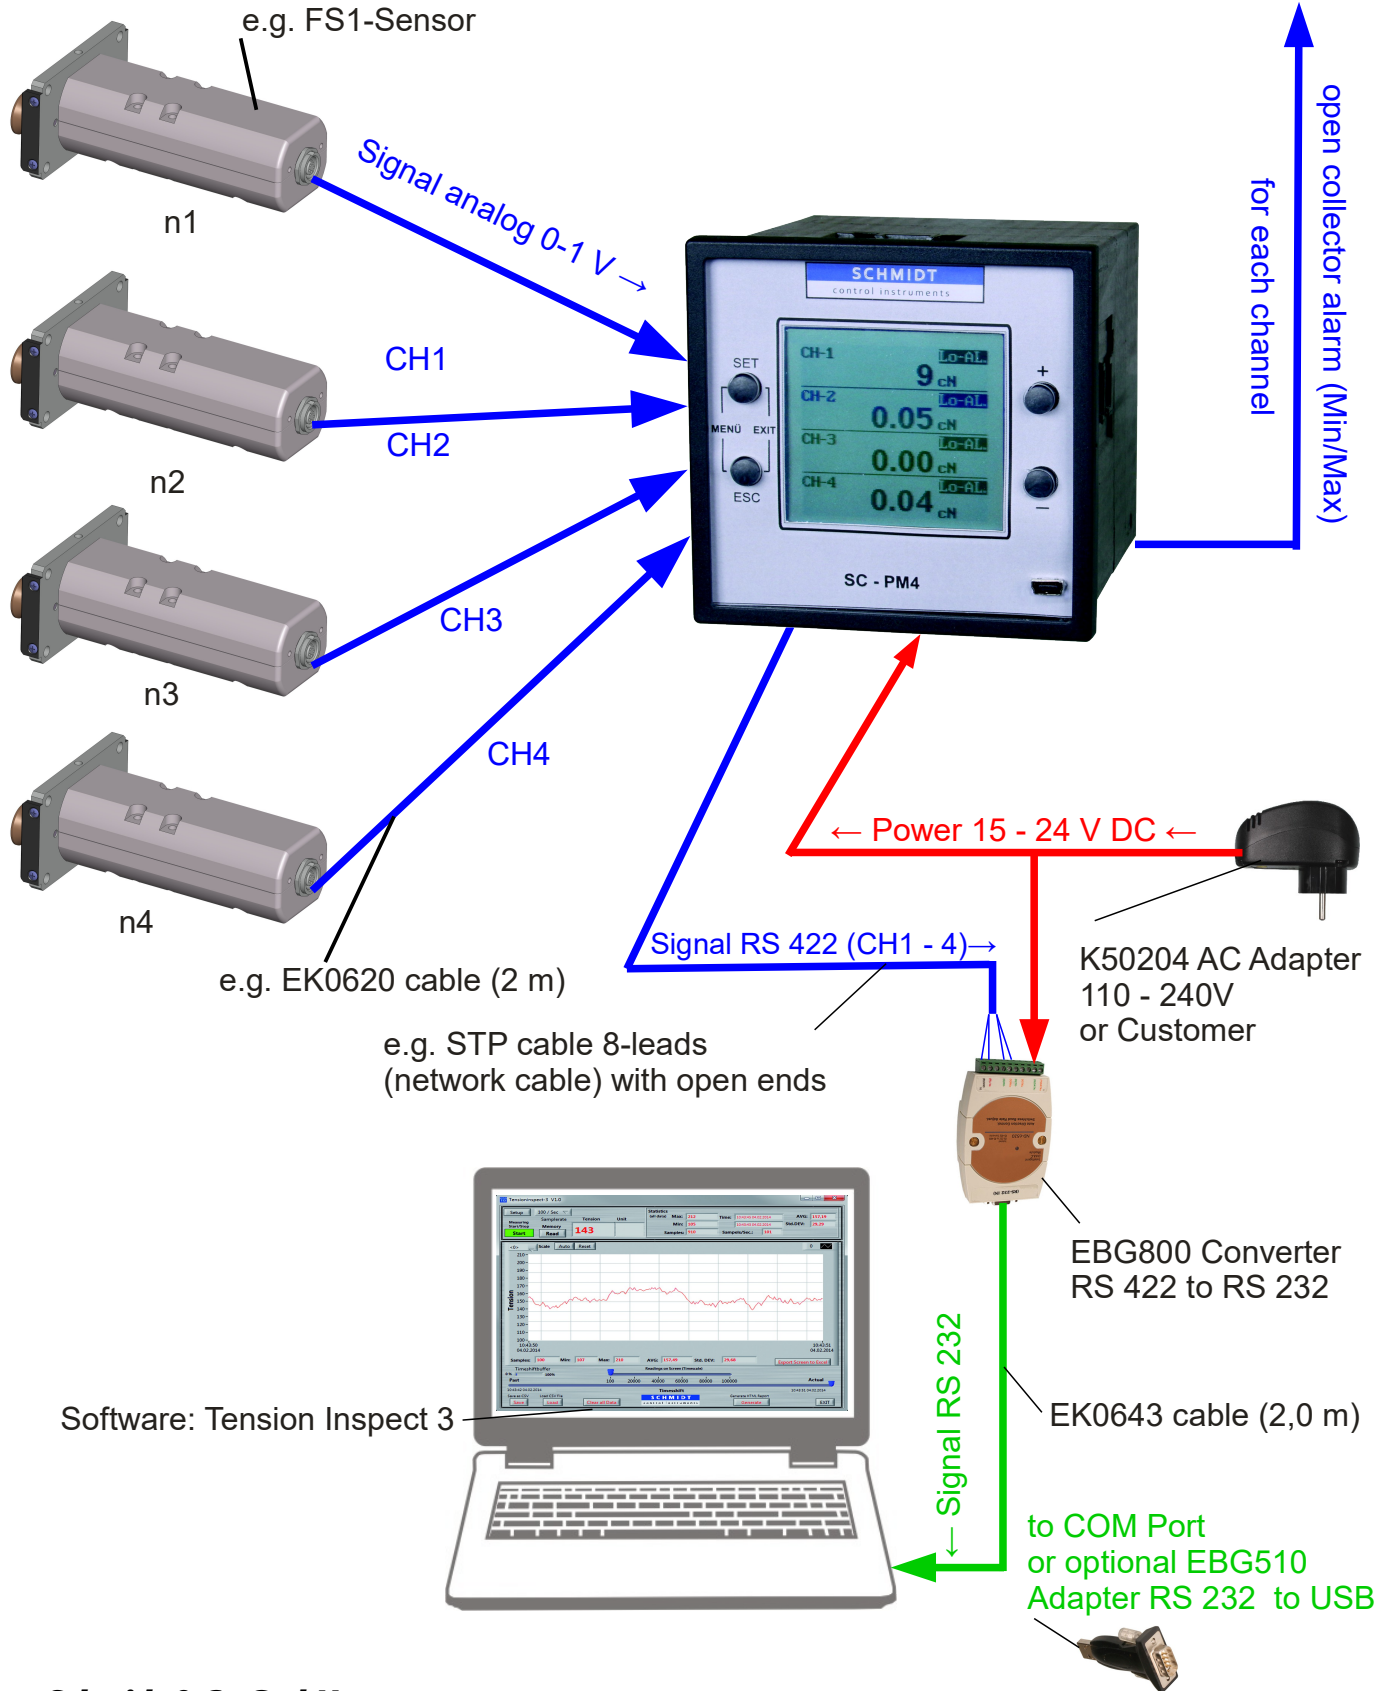



max. 4xMZ – Sensor to SC-PM4 to PC

outputs: RS 422 and alarm

