


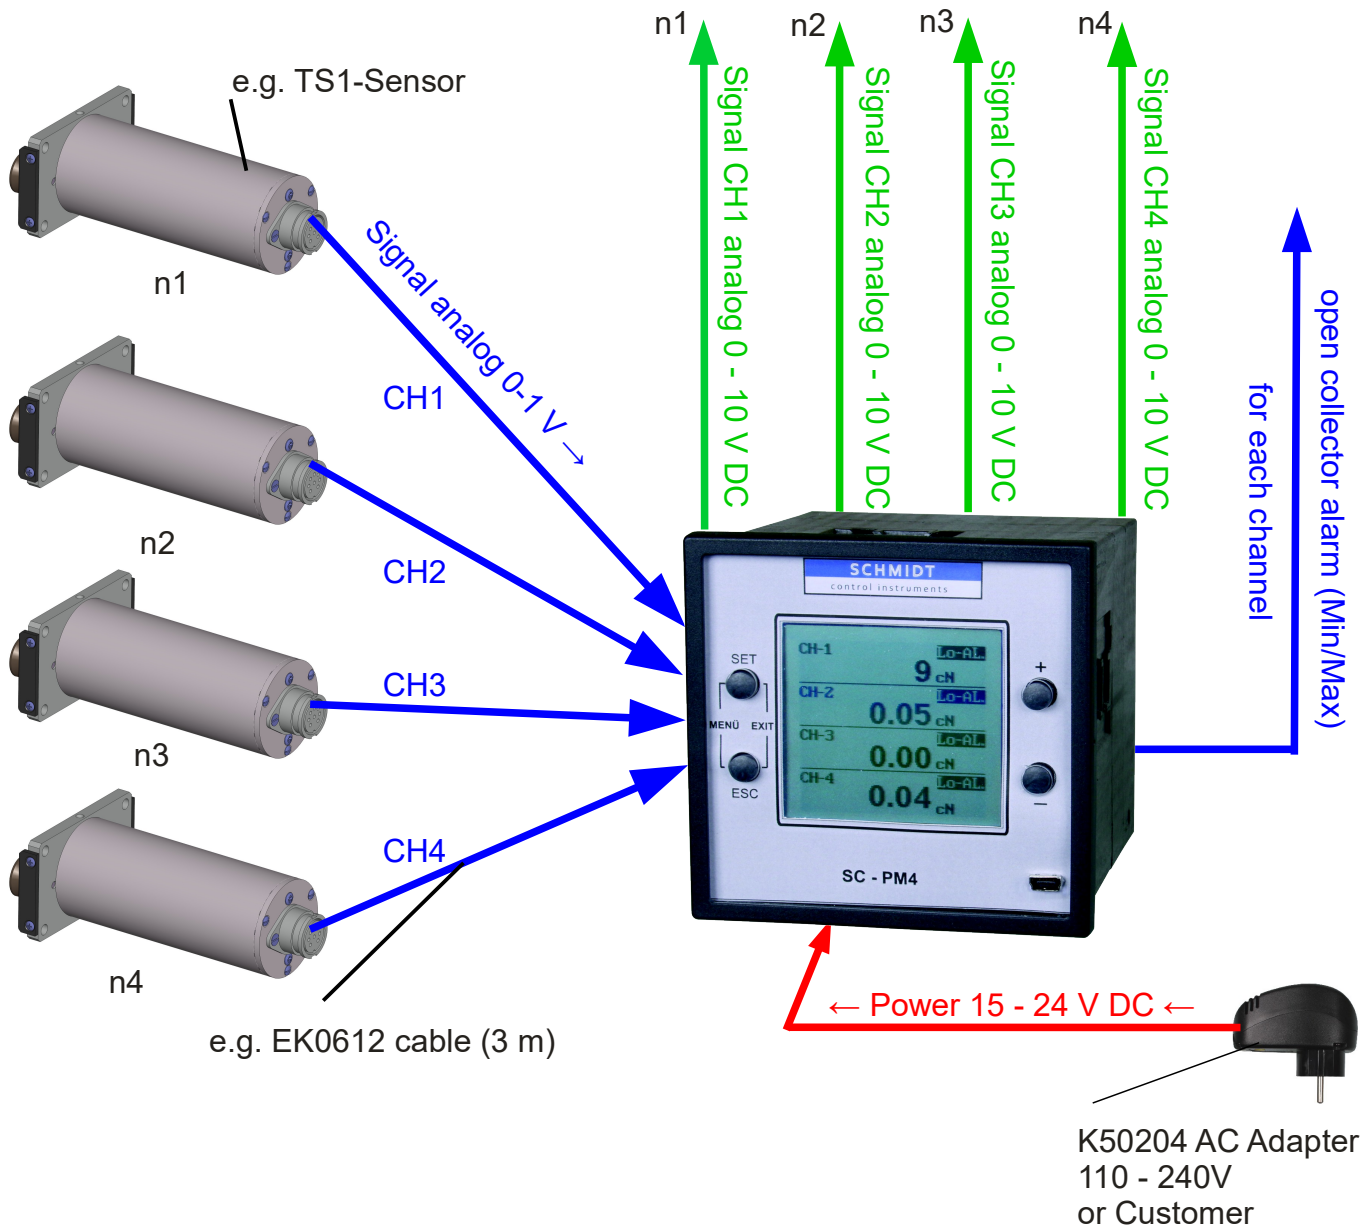

max. 4xTS1 – Sensor to SC-PM-4 to PC


outputs: analog 0 – 10 V and alarm





max. 4xFS1 – Sensor to SC-PM-4 to PC

outputs: analog 0 – 10 V and alarm

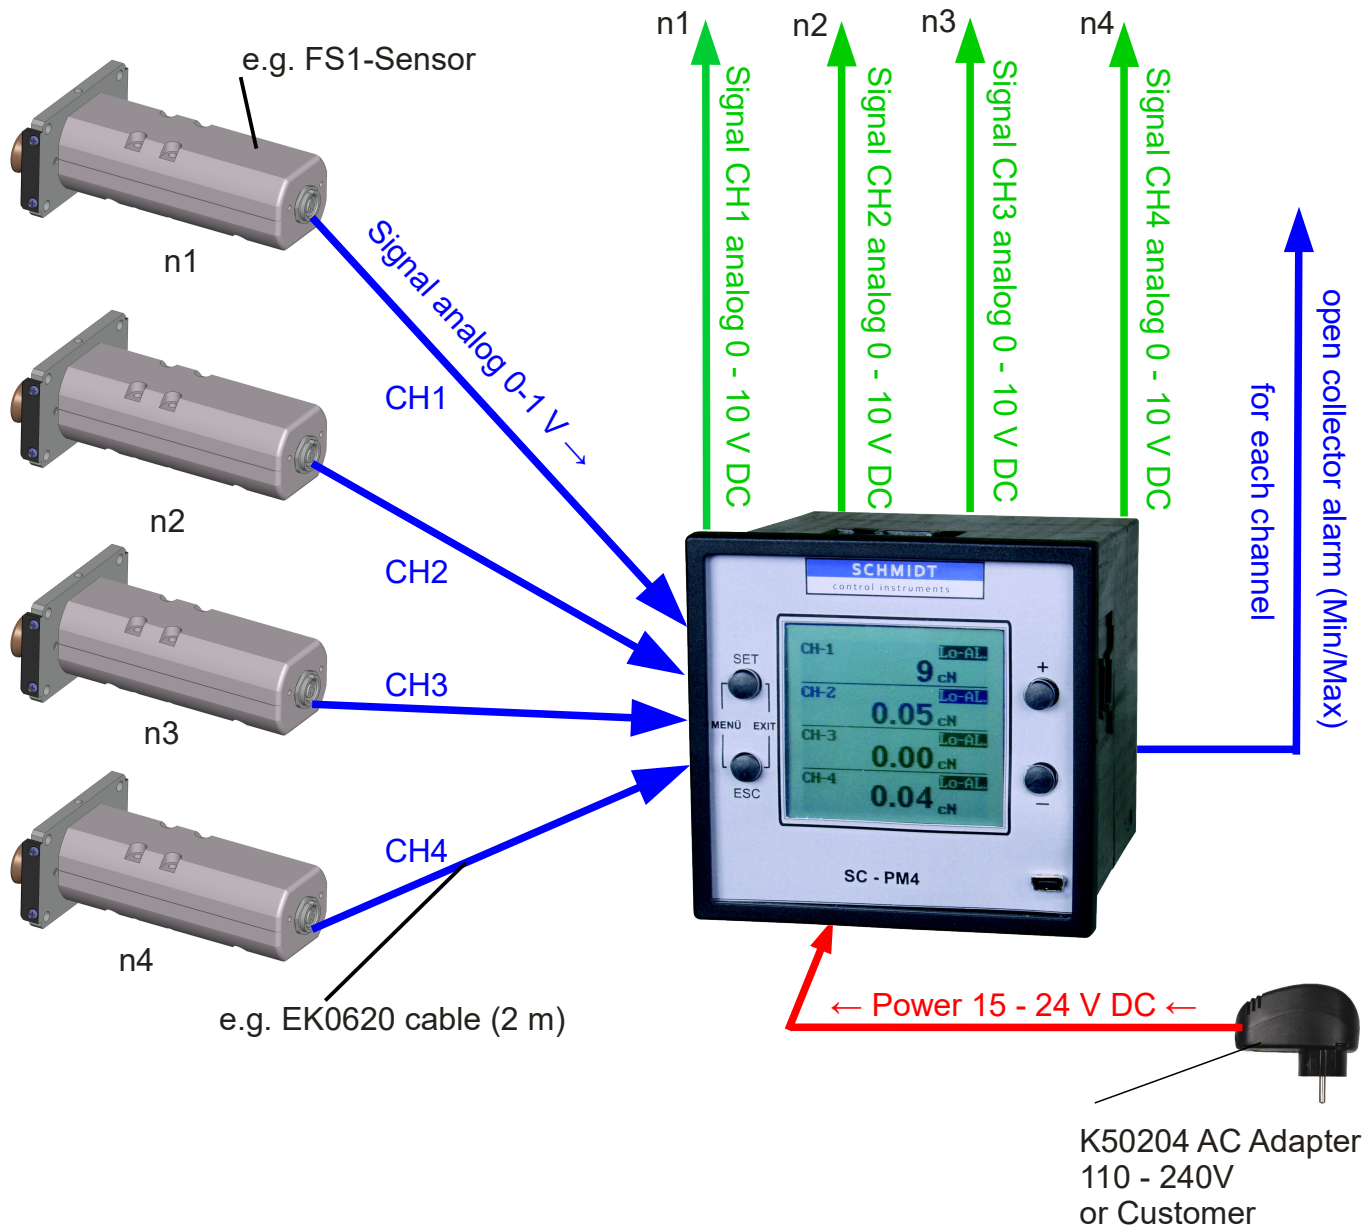



max. 4xMZ – Sensor to SC-PM-4 to PC

outputs: analog 0 – 10 V and alarm

