


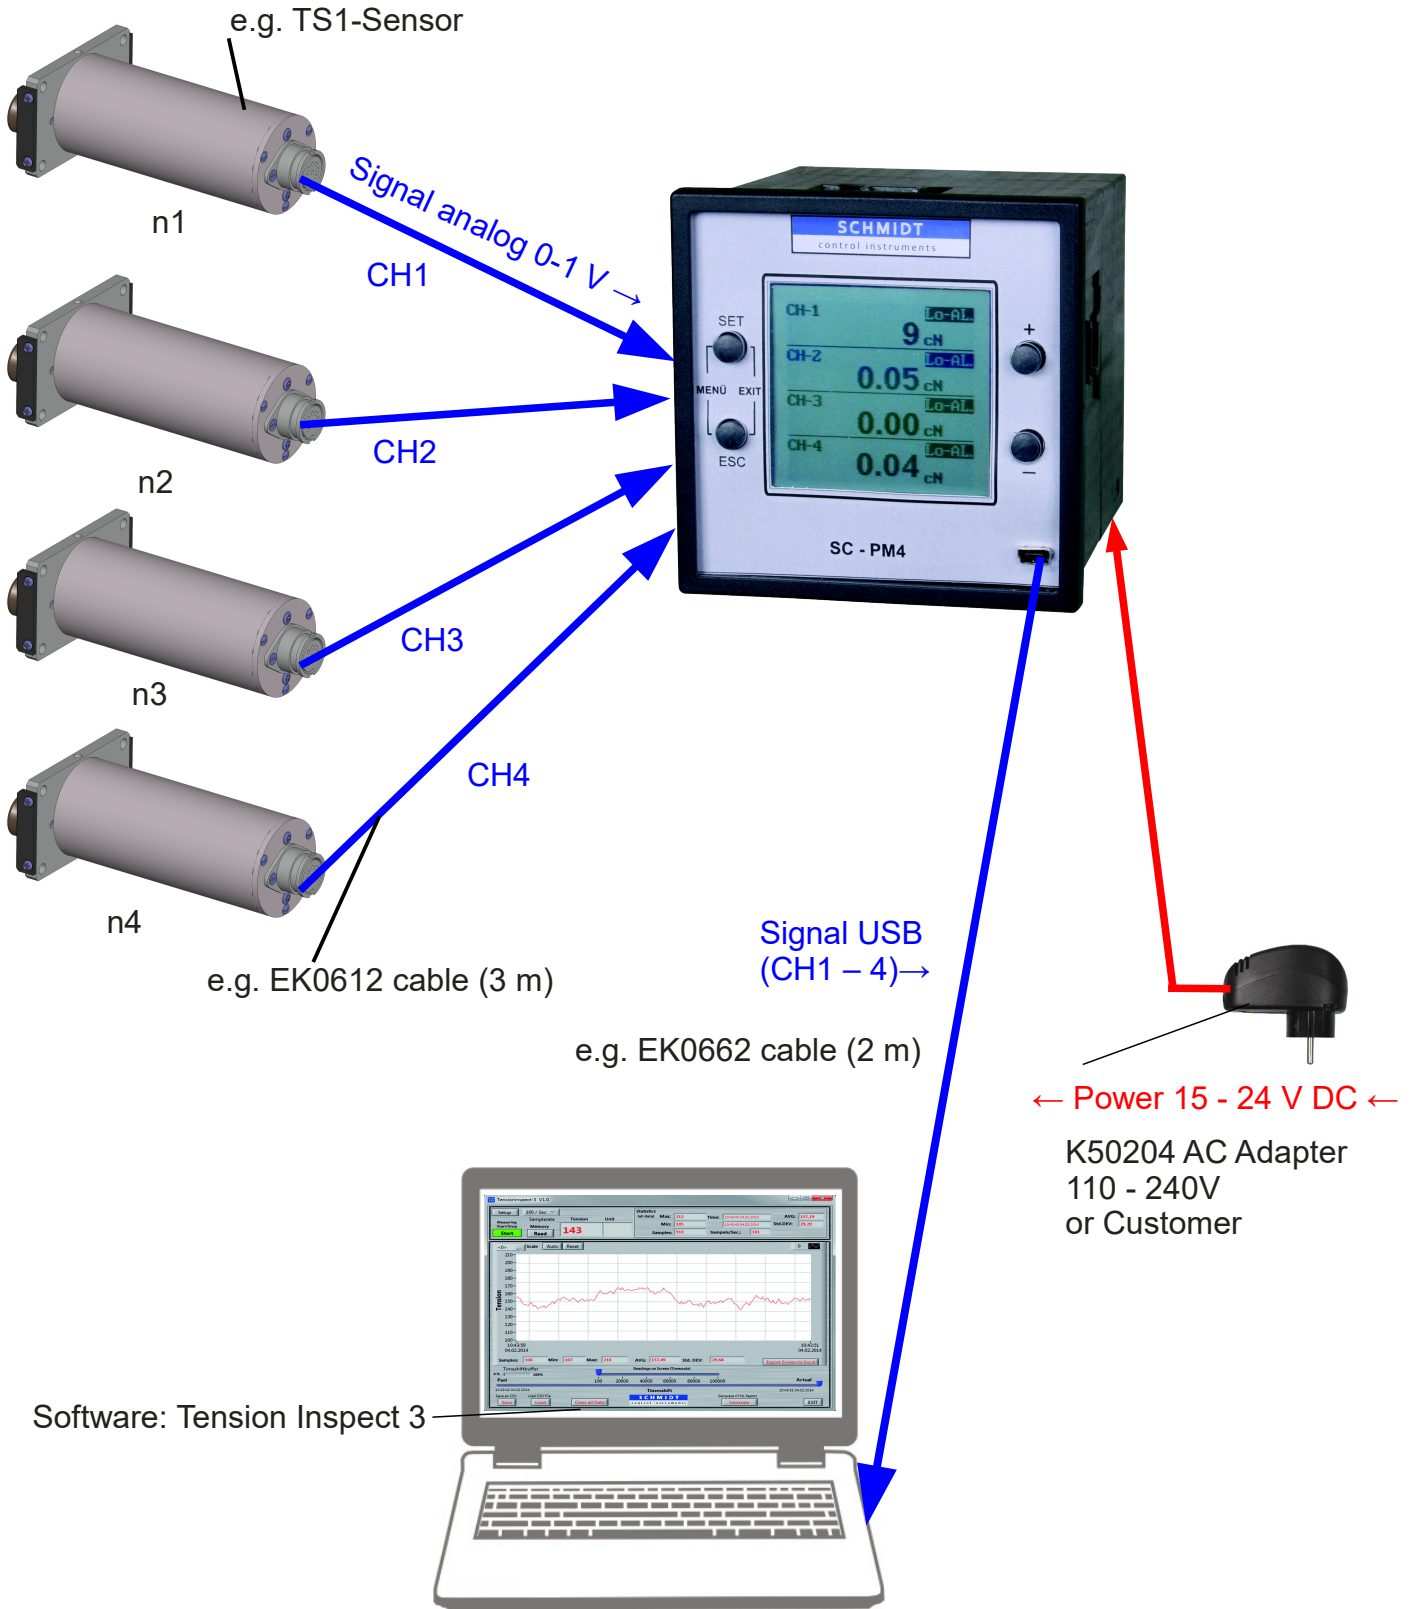


max. 4xTS1 – Sensor to SC-PM4 to PC outputs: USB





max. 4xFS1 – Sensor to SC-PM4-USB to PC

outputs: USB and alarm

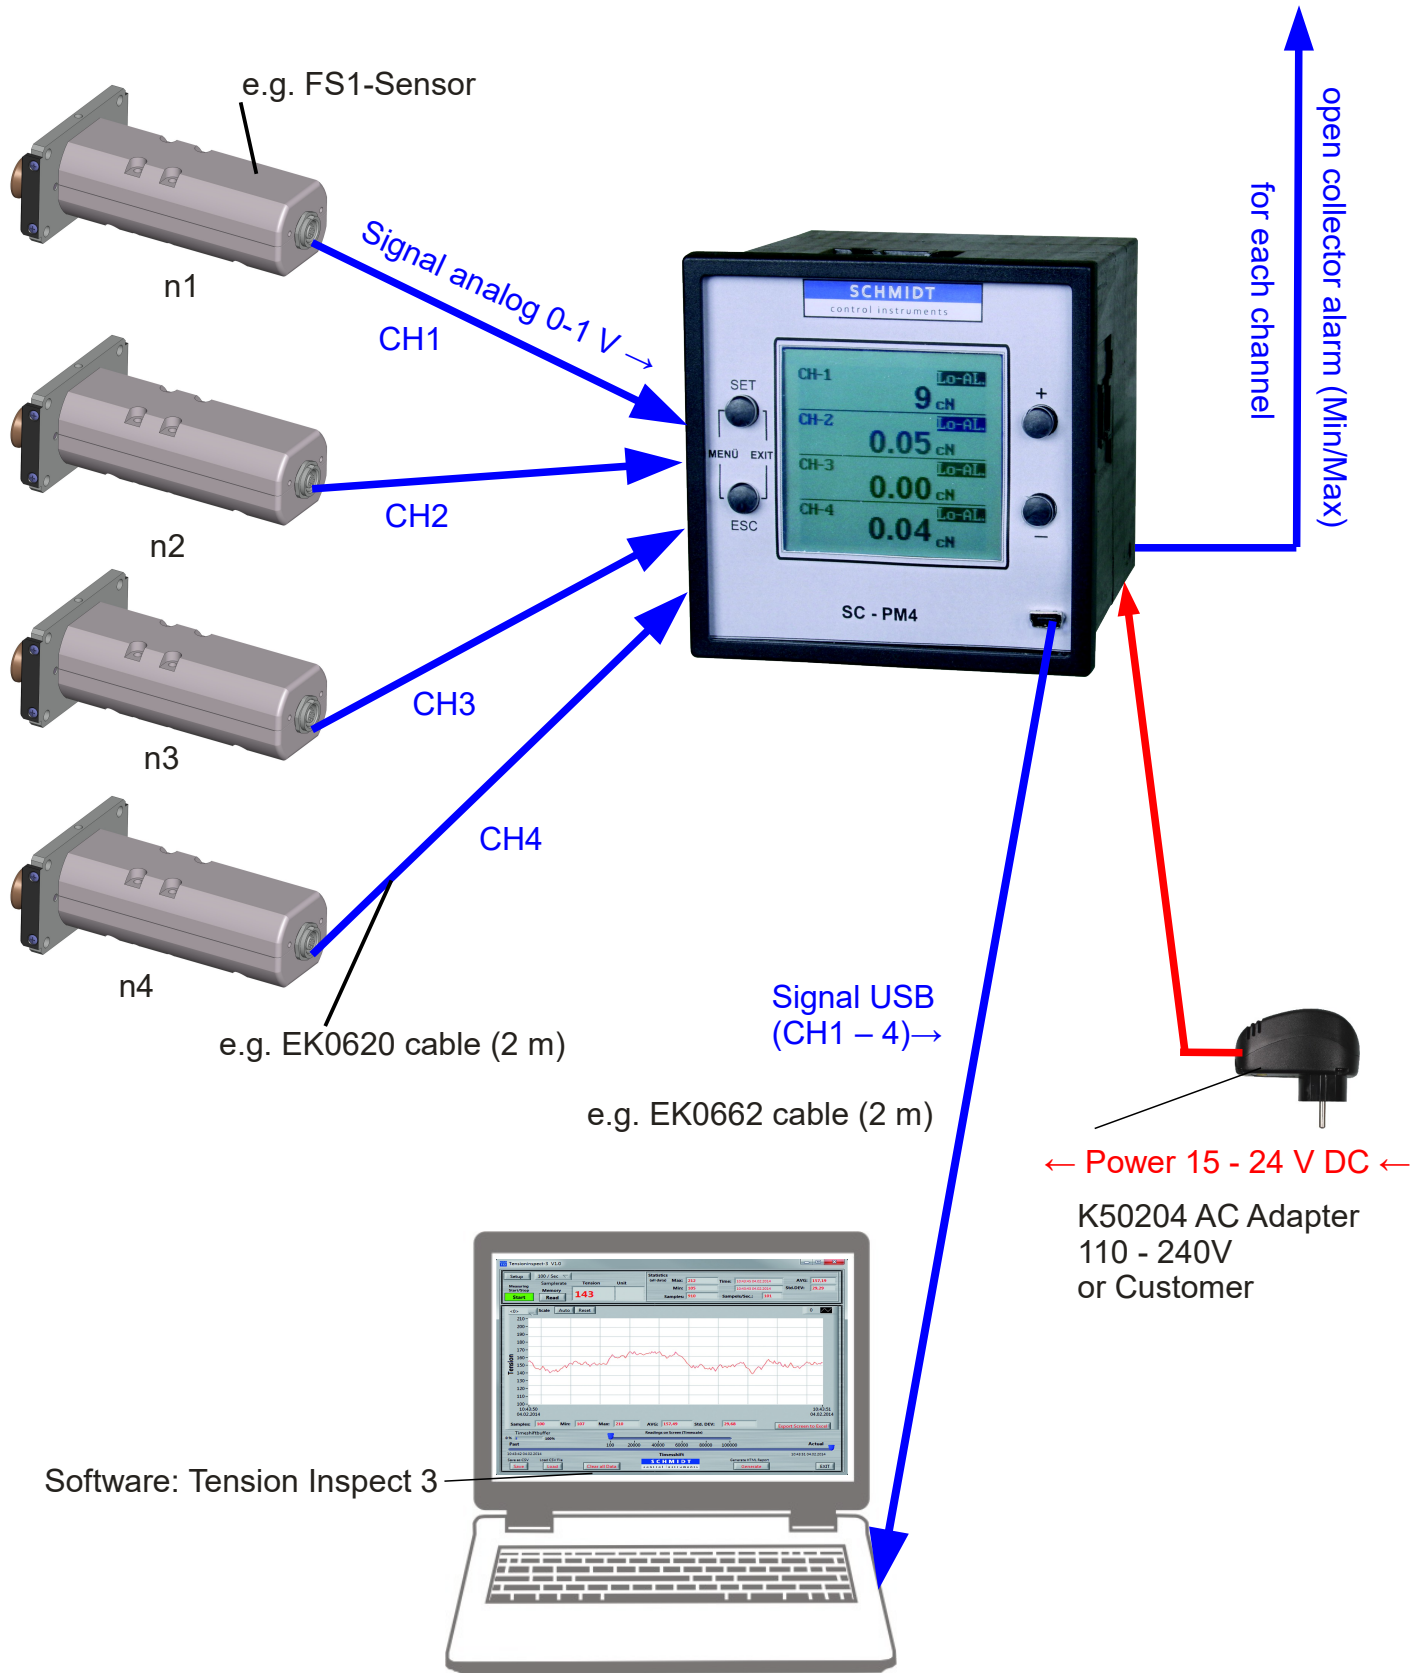



max. 4xMZ – Sensor to SC-PM4 to PC

outputs: USB and alarm

