



1xFS-WL + max. 3xFS-422 – Sensor to SC-PM4-WL to PC

outputs: RS 422, USB, analog and alarm

