

Electric Vertical Test Stand

SJV-10K

USER'S MANUAL

CONTENTS


- 1.Function... .. 1
- 2.Structure 1
- 3.Installation of Force Gauge... .. 2
- 4.Specification 2
- 5.Attention 3
- 6.Operation 3
- 7.Maintenance 3
- 8.Packing List 3

1. Function


SJV-10K Electric Vertical Test Stand, applied in tension and compression test, is assembled with SN/SKN/SH/SP(2N-10kN) Series Force Gauge. The stand adopts double-column construction with good stability, wide application range and easy operation. Furthermore, it has advantages of non-polar speed adjustment, manual or automatic operation, suitable for fields of rubber & plastic, textile, construction, complex material, wire&cables, auto accessories, engine and scientific research, ect.

Note: When installing different force gauge, it should equip different backboard.

2. Structure

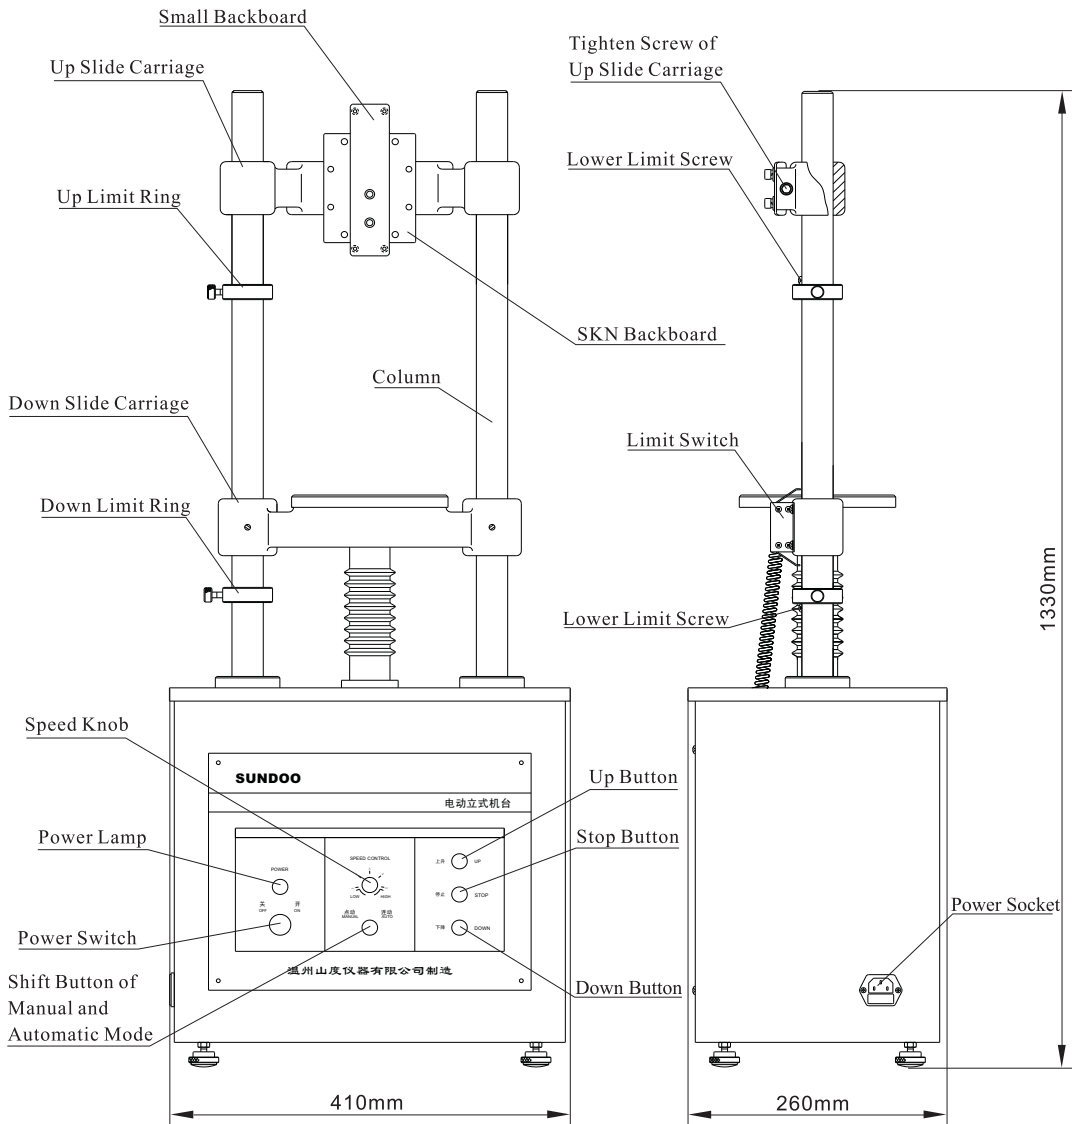

3. Installation of Force Gauge

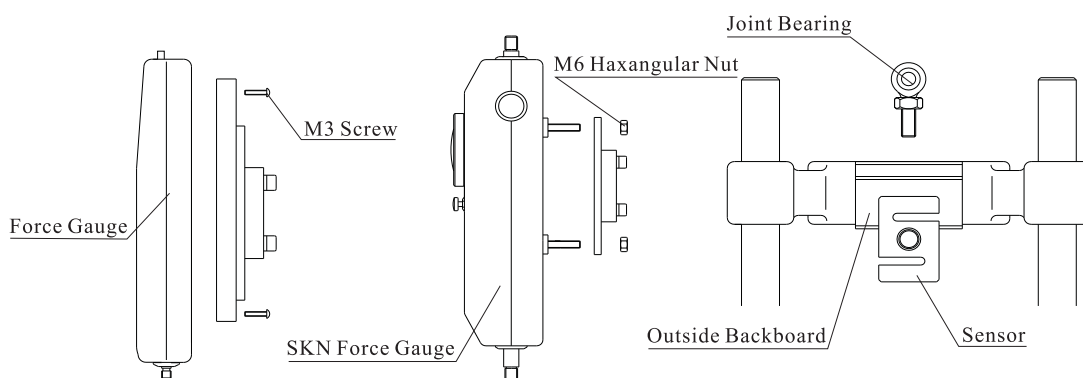

Picture 1 Installation of SN/SH/SP(Sensor Inside) Force Gauge

Picture 2 Installation of SKN Series Force Gauge

Picture 3 Installation of SH/SP(1kN-5kN)

1. When installing SN/SH/SP(Sensor Inside) Force Gauge, take out 4 pieces of M3 screws from toolbox, and through 4 deep hole of Small Backboard, tighten them into 4 installing hole on force gauge(Picture 1);
2. When installing SKN Series Force Gauge, take off 4 pieces of M6 hexangular screws of back cover, and backboard. also take off Small Backboard on test stand; through 4 hole of SKN backboard, tighten 4 pieces of M6 screws into installing hole of SKN Force Gauge by nut (Picture 2);
3. When installing SH/SP(1kN-5kN) Force Gauge, it should equip the SJ-021 Outside Backboard. Loosen the 4 pieces of M6 hexangular screws, take off the SKN Backboard, fix the SJ-021 Backboard on the position of SKN Backboard by the 4 screws; Take one of the joint axletree from sensor toolbox, and tighten the sensor through hole of backboard as showing in picture(Picture 3).

4. Specification

Max Capacity:	10KN
Stroke:	200mm
Gap between columns::	215mm
Voltage:	Single-phase 220V
Rate Current:	1.5A
Fuse of Main Circuit:	3A
Fuse of Main Circuit:	0.5A
Working Temperature:	20±10℃
Store Temperature:	-27℃~+70℃
Relative Humidity:	15%~80% RH

Test Speed(Unit: mm/min):

Grading	1	2	3	4	5
Speed	24	48	72	96	120

When the testing speed is upper than or equivalent to Grading 3, accuracy is within ±5%;
When the testing speed is lower than Grading 3, accuracy is within ±10% .

5.Attention

- A. Please do not take Up or Lower Limit Screw at any time to prevent screw mandrel from getting out or damaging to other accessories.
- B. When needing to move UP Slide Carriage for appropriate space, please pay attention:
 1. Loosen the tighten screw at two side of Up Slide Carriage, during which it should support the slide carriage by hands to avoid dropping down.
 2. The Up Slide Carriage will not upper than the top of column, and lower than Up Limit Screw.

6.Operation

Examine before Operation

- A. Check Tighten Screw of Up Slide Carriage to be locked firmly;
- B. Turn on the power switch, then the power lamp will be light.
- C. Examine the stand whether there is abnormal sound when moving without load.

Manual Test

Choose the Manual mode by pressing Shift Button of Manual and Automatic Mode; Press Up or Down button all along, the test stand will work; Loosen the button, the test stand will stop work and finish test.

Automatic Test

Choose the Automatic mode by pressing Shift Button of Manual and Automatic Mode; Press up or Down button once, the test stand will work; Press Stop button, the test stand will stop and finish test.

7.Maintenance

- A. Please keep the environment clean and prevent liquid and metal scraps from entering the engine box, otherwise electric shock may happen and driving components may be damaged.
- B. Please keep the column and lower slide carriage hole clean.
- C. Add some lubricant to screw mandrel and gear after period of time.
- D. Please pull out power connector, and make the stand away from dust and moisture if it is not used.

8.Packing List

Number	Parts Name	Quantity
1	SJV-10K Main Body	1
2	M10 Inner Hexagon Spanner	1
3	M6 Inner Hexagon Spanner	1
4	220V Power Wire	1
5	M10 Hold-down Nut	4
6	M12×25 Socket Head Screw	1
7	Manual	1
8	Qualification Certificate	1

CONTINUTATION

Dear user

We are pleased for your patronage of purchasing our SJV-10K Electric Vertical Test Stand. Before using the equipment, please read the manual carefully and keep it well to give you help when you can not learn it or there is something wrong with it.

Description in the manual is based on the newest products. Owing to improvement or other changes, contents of manual may differ from practical situation. Our company will reserve the right of recension at any moment. Please kindly forgive not to notify the revised place one by one.

The copyright of this manual belongs to Wenzhou Sundoo Instrument Co., Ltd. Any companies or individuals have no right to copy or plagiarize part or whole contents of the manual without permission of our company.

制造商：温州山度仪器有限公司

MANUFACTURER: WENZHOU SUNDOO INSTRUMENTS CO.,LTD

地址：温州高新技术产业园区10区E幢

Add: Building E, No.10 High-tech Industrial Zone Wenzhou China

Zip: 325013

Tel: +86 577 88609905 88609730 Fax: +86 577 88390155

Http://www.sundoo.com E-mail: export@sundoo.com