


geratech<sup>®</sup>

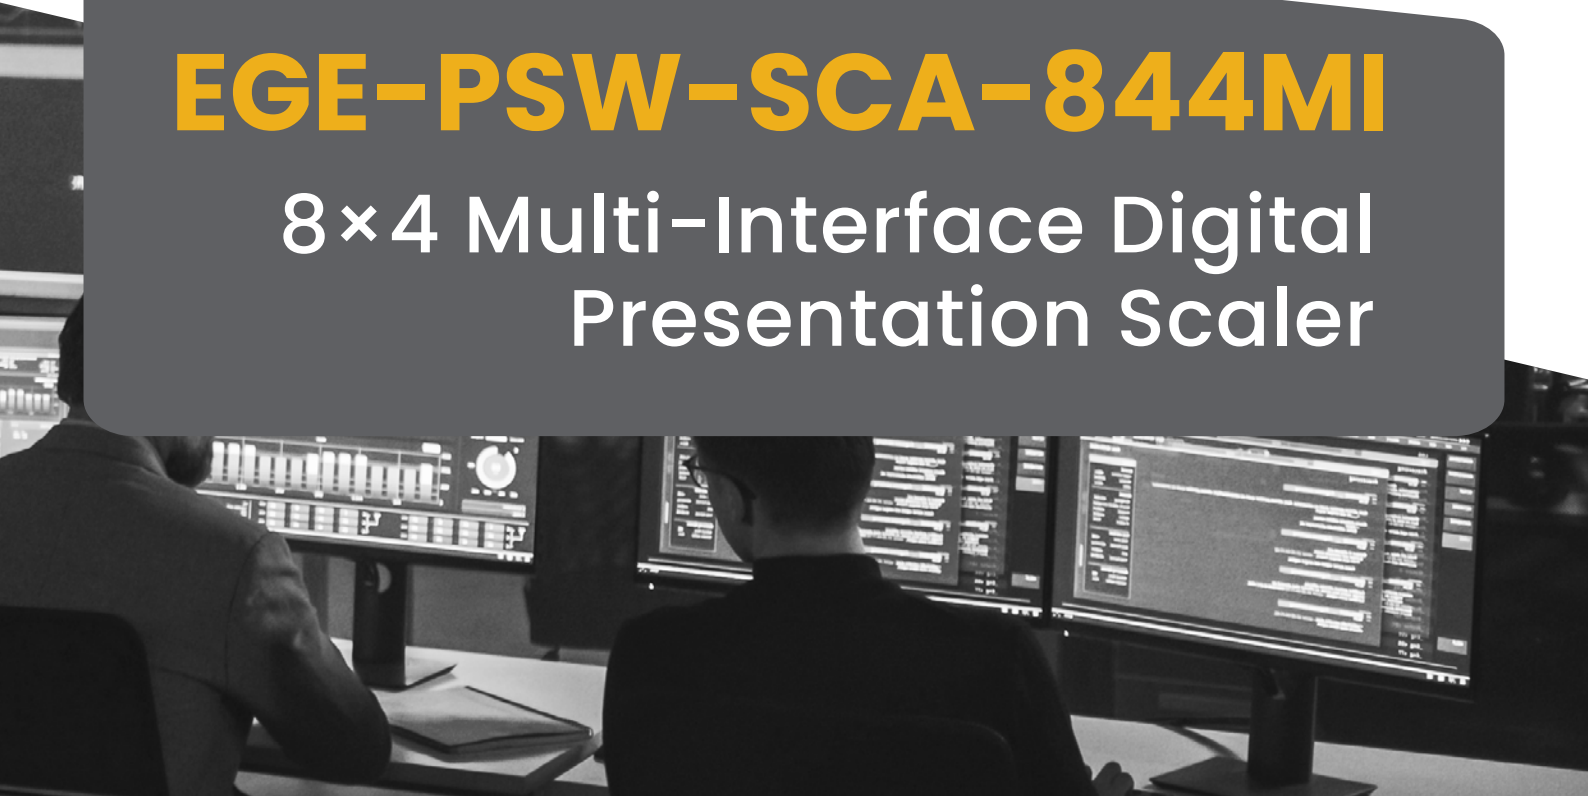

# EGE-PSW-SCA-844MI

8×4 Multi-Interface Digital  
Presentation Scaler





**DISCLAIMERS**

The information in this manual has been carefully checked and is believed to be accurate. Geratech assumes no responsibility for any infringements of patents or other rights of third parties which may result from its use.

Geratech assumes no responsibility for any inaccuracies that may be contained in this document. Geratech also makes no commitment to update or to keep current the information contained in this document.

Geratech reserves the right to make improvements to this document and/or product at any time and without notice.

**COPYRIGHT NOTICE**

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means—electronic, mechanical, magnetic, optical, chemical, manual, or otherwise—without express written permission and consent from Geratech.

© Copyright 2012 by Geratech.

All Rights Reserved.

Version 1.0 October 2009

**TRADEMARK ACKNOWLEDGMENTS**

All products or service names mentioned in this document may be trademarks of the companies with which they are associated.

## SAFETY PRECAUTIONS

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply.

Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not attach the power supply cabling to building surfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.

## REVISION HISTORY

VERSION NO.	DATE DD/MM/YY	SUMMARY OF CHANGE
VR0	15/04/16	Preliminary Release

CONTENTS

- 1. Introduction..... 1
- 2. Applications ..... 1
- 3. Package Contents ..... 1
- 4. System Requirements..... 1
- 5. Features..... 2
- 6. Operation Controls and Functions ..... 3
  - 6.1 Front Panel ..... 3
  - 6.2 Rear Panel..... 4
  - 6.3 Remote Control ..... 5
  - 6.4 IR Pin Assignment ..... 6
  - 6.5 RS-232 Pin Assignment..... 7
  - 6.6 RS-232/Telnet Commands ..... 8
  - 6.7 OSD Menu..... 10
  - 6.8 Telnet Control ..... 13
  - 6.9 WebGUI Control ..... 15
- 7. Connection Diagram ..... 16
- 8. Specifications ..... 17
  - 8.1 Input Resolution Support ..... 18
  - 8.2 Output Resolution Support ..... 19
- 9. Acronyms ..... 20

## **1. INTRODUCTION**

This HDBaseT™ capable 8 by 4 Digital Presentation Scaler can switch and scale HDMI/HDBaseT/PC/Composite Video signals from any one of its eight inputs and simultaneously display it on any of its HMDI or HDBaseT outputs. The unit has and HDMI bypass output, allowing local monitoring of any of the HDMI or HDBaseT inputs, and features full 5play™ convergence for easy integration of compatible transmitters and receivers. It has the added benefit of control via IR remote control, RS-232, IP/Telnet and WebGUI, with all information including system status presented on its comprehensive LCD display.

## **2. APPLICATIONS**

- Home Theater/Entertainment
- Lecture Room/Hall Presentation
- Show Room/Demo Room
- Public Commercial Display
- Information Board

## **3. PACKAGE CONTENTS**

- 1 x 8 by 4 Presentation Scaler
- 1 x IR Extender Cable
- 1 x IR Receiver Cable
- 1 x Remote Control with Battery
- 1 x 24V/ 2.7A DC Power Adaptor
- 1 x Power Cord
- Operation Manual

## **4. SYSTEM REQUIREMENTS**

Input source equipment such as Blu-ray/DVD/PS3 player or Set-Top-Box and output HDMI TV/Display and or audio amplifier with connection cables.


## 5. FEATURES

- HDMI, HDCP and DVI compliant
- Full 5Play™ convergence: Video, Audio, LAN serving, Power over Cable (PoC) and Control (IR & RS-232 bypass)
- Supports distances of up to 100 meters over industry standard CAT5e/6/7 cable
- Supports scaling of any input signals to a wide range of HDTV and PC output resolutions up to 1080p and WUXGA (RB)
- Digital to Analog and Analog to Digital Audio conversion (DAC/ADC)
- Simultaneous video output of the selected source through the HDBaseT and HDMI outputs and audio output through the digital coaxial and analog L/R outputs
- Features four HDMI inputs with corresponding L/R audio inputs (3.5mm mini-jack), two HDBaseT CAT5e/6/7 inputs, PC (15-pin D-Sub) with L/R audio (3.5mm mini-jack) and Composite Video and L/R audio (3 RCA)
- Features two HDMI outputs, one HDBaseT CAT5e/6/7 outputs, one Digital Coaxial audio output and one L/R audio 3.5mm mini-jack output
- Supports switchable HDMI bypass allowing local monitoring of any of the HDMI or HDBaseT inputs
- Supports Power over Cable on the CAT5e/6/7 output to a compatible Receiver
- Supports control via IR, Remote control, RS-232, Telnet WebGUI and on-panel controls
- Supports HDBaseT LAN serving function to compatible Receivers

**Note:** *The PoC function is only designed for powering compatible Receiver units only---non-PoC Receiver will need their own power supply. Receivers of another brand may not be compatible.*

## 6. OPERATION CONTROLS AND FUNCTIONS


### 6.1 Front Panel

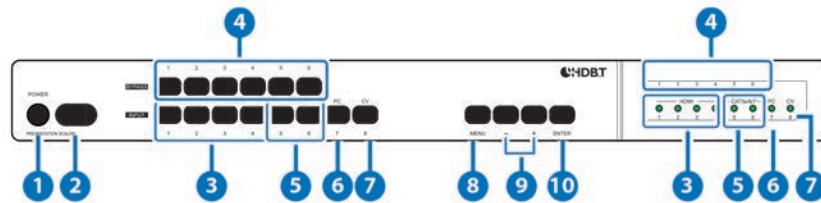

- ❶ **POWER:** Press this button to turn ON the device and the LED will illuminated.
- ❷ **IR Window:** This IR receiver receives only the remote control signal from the packaged included remote control.
- ❸ **INPUT HDMI 1~4 & LED:** Press the IN buttons to select an input source signal from the 4 HDMI input sources to be display for output ports. The LED will illuminate according to the selection.
- ❹ **BYPASS & LED:** Press these buttons to select an input source signal from the 6 input sources to be display for BYPASS output port. The LED will illuminate according to the selection.
- ❺ **INPUT CAT5e/6/7 5~6 & LED:** Press the IN buttons to select an input source signal from the 2 CAT5e/6/7 input sources to be display for output ports. The LED will illuminate according to the selection.
- ❻ **INPUT PC & LED:** Press this button to select PC input source signal to be display for PC output port. The LED will illuminate according to the selection.
- ❼ **INPUT CV & LED:** Press this button to select CV input source signal s to be display for CV output port. The LED will illuminate according to the selection.
- ❽ **MENU:** Press this wheel to enter into the menu and press it again to confirm the selection.
- ❾ **+/-:** Press these buttons to move up/down under menu selection or under volume control to adjust audio volume up/down.
- ❿ **ENTER:** Press this button to confirm menu selection.



## 6.2 Rear Panel

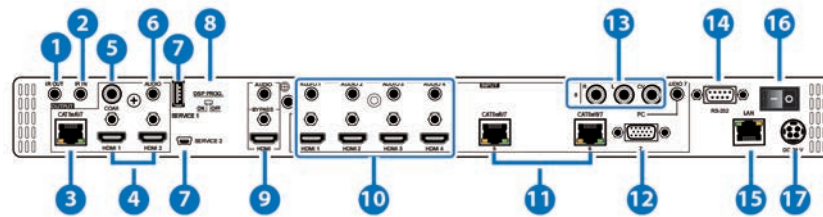

- 1 **IR OUT:** Connect to the supplied IR Blaster cable for IR signal transmission. Place the IR Blaster in direct line-of-sight of the equipment to be controlled.
- 2 **IR IN:** Connect to the supplied IR Extender cable for IR signal reception. Ensure that remote being used is within the direct line-of-sight of the IR Extender.
- 3 **OUTPUT CAT5e/6/7:** Connect to the Receiver unit with a Single CAT5e/6/7 cable for transmission of all data signals.
- 4 **OUTPUT HDMI:** Connect to a HDMI equipped TV/monitor for display of the HDMI input source signal.
- 5 **OUTPUT COAX:** Connect to audio sound equipment such as speaker or amplifier for audio sound output.
- 6 **OUTPUT AUDIO:** Connect to audio sound equipment such as speaker or amplifier for audio sound output.
- 7 **SERVICE 1 & 2:** These slots are reserved for firmware update use only.
- 8 **DSP PROG Switch:** This switch is reserved for firmware update use only. Default setting is on OFF.
- 9 **BYPASS:** Connect to a HDMI equipped TV/monitor or DVI equipped monitor with audio sound equipment such as speaker for both video and audio output display.
- 10 **INPUT HDMI 1~4 & AUDIO 1~4:** Connect to HDMI source equipment such as DVD or Blu-ray player along or to DVI source equipment along with audio source signal.
- 11 **INPUT CAT5e/6/7:** Connect this port to HDMI to CAT5e/6/7 Transmitter with CAT5e/6/7 cable to extend the signal up to 100m.
- 12 **INPUT PC & AUDIO:** Connect this port to PC/Laptop with audio signal for input signal selecting.

- 13 **INPUT CV:** Connect this port to source equipment such as video player or Set-Top-Box for input signal selecting.
- 14 **RS-232:** Connect from PC/Laptop for RS-232 command sending to control the device.
- 15 **LAN:** Connect from PC/Laptop with active internet service for Web GUI control with RJ-45 terminated cable.
- 16 **POWER Toggle:** Switch this toggle to turn ON and OFF the device's power.
- 17 **DC 24V:** Connect the adaptor with power cord included in the package and connect to AC wall outlet for power supply.

## 6.3 Remote Control

### 1 POWER:

Press this button to switch the device ON or to put the device into Standby mode.

### 2 MUTE:

Press this button to mute output audio sound.

### 3 INPUT:

Press these buttons one time each to select input source for outputs display.

### 4 MENU:

Press this button to enter into the On-Screen Menu.

### 5 EXIT:

Press this button to exit menu selection.

### 6 ▲▼◀▶ & OK:

Press OK to confirm the selection or use the directional buttons to navigate the On-Screen-Menu.

### 7 ADJUST:


Press this button when output image is not fitting the display's screen perfectly. The device will auto adjust the image to full screen.

### 8 RESET:

Press this button to set the device back into the factory default setting.


### 9 BYPASS:

Press these buttons to select an input source for Bypass output port to display.

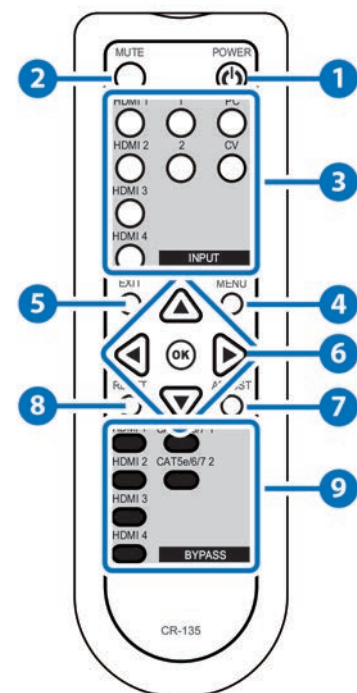

6.4 IR Pin Assignment

IR BLASTER

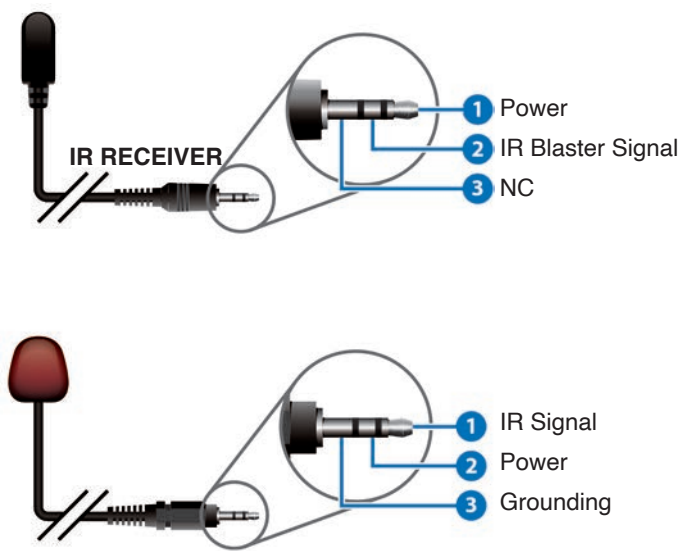

6.5 RS-232 Pin Assignment

Scaler			Remote Control	
PIN	Assignment		PIN	Assignment
1	NC		1	NC
2	Tx		2	Rx
3	Rx		3	Tx
4	NC	►	4	NC
5	GND	◄	5	GND
6	NC		6	NC
7	NC		7	NC
8	NC		8	NC
9	NC		9	NC

Baud Rate: 19200bps  
Data Bit: 8 bits  
Parity: None  
Flow Control: None  
Stop Bit: 1

## 6.6 RS-232/Telnet Commands

COMMAND	DESCRIPTION	
<b>S SOURCE 1~8</b>	1=HDMI 1 2=HDMI 2 3=HDMI 3 4=HDMI 4	5=HDBT 1 6=HDBT 2 7=PC 8=VIDEO
<b>R SOURCE</b>	Reports the numerical equivalent for SOURCE setting (as above)	
<b>S OUTPUT 0~21</b>	0=640×480 1=800×600 2=1024×768 3=1280×768 4=1360×768 5=1280×720 6=1280×800 7=1280×1024 8=1440×900 9=1400×1050 10=1680×1050	11=1600×1200 12=1920×1080 13=1920×1200 14=480p 15=720p@60 16=1080i@60 17=1080p@60 18=576p 19=720p@50 20=1080i@50 21=1080p@50
<b>R OUTPUT</b>	Reports the numerical equivalent for OUTPUT setting (as above)	
<b>S SIZE 0~6</b>	0=OVERSCAN 1=FULL 2=FOLLOW INPUT 3=PAN SCAN	4=LETTER BOX 5=UNDER 2 6=UNDER 1
<b>R SIZE</b>	Reports the numerical equivalent for SIZE setting (as above)	
<b>S INPUTHDCP 0/1</b>	0=OFF 1=ON	
<b>R INPUTHDCP</b>	Reports HDMI support HDCP status	
<b>S CONTRAST 0~60</b>	Setups the numerical equivalent for CONTRAST setting (as left)	
<b>R CONTRAST</b>	Reports the numerical equivalent for CONTRAST setting	
<b>S BRIGHTNESS 0~60</b>	Setups the numerical equivalent for BRIGHTNESS setting (as left)	
<b>R BRIGHTNESS</b>	Reports the numerical equivalent for BRIGHTNESS setting	
<b>S HUE 0~60</b>	Setups the numerical equivalent for HUE setting (as left)	
<b>R HUE</b>	Reports the numerical equivalent for HUE setting	
<b>S SATURATION 0~60</b>	Setups the numerical equivalent for SATURATION setting (as left)	
<b>R SATURATION</b>	Reports the numerical equivalent for SATURATION setting	
<b>S SHARPNESS 0~30</b>	Setups the numerical equivalent for SHARPNESS setting (as left)	
<b>R SHARPNESS</b>	Reports the numerical equivalent for SHARPNESS setting	

COMMAND	DESCRIPTION		
S NR 0~3	0=OFF 1=LOW		2=MIDDLE 3=HIGH
R NR	Reports the numerical equivalent for the NOISE REDUCTION setting (as above)		
S VOLUME 0~100 R VOLUME	Volume Value Reports Volume value		
S AUDIO DELAY 0~3	0=OFF 1=40ms		2=110ms 3=150ms
R AUDIO DELAY	Reports the numeric equivalent for AUDIO DELAY setting (as above)		
S AUDIO MUTE 0/1	0=ON		1=MUTE
R AUDIO MUTE	Reports the numeric equivalent for AUDIO MUTE setting (as above)		
S HDMIAUDIO 0/1	0=AUTO 1=EXT.		
R HDMIAUDIO	Reports HDMI AUDIO Status		
S KEY LOCK 0/1	0=Disable		1=Enable
R KEY LOCK	Reports the numeric equivalent for KEY LOCK setting (as above)		
S FREERUNCOLOR 0/1	0=Black		1=Blue
R FREERUNCOLOR	Reports the numeric equivalent for FREERUN Colorsetting (as above)		
S HDBTUART 0/1 R HDBTUART	0=HDBT1		1=HDBT2
	Reports the numeric equivalent for HDBT UART setting (as above)		
S AUTO SCAN 0/1 R AUTO SCAN	0=OFF		1=ON
	Reports the numeric equivalent for AUTO SCAN setting (as above)		
S BYPASS 1~6 R BYPASS	1=HDMI 1 4=HDMI 4	1=HDMI 2 5=HDBT 1	3=HDMI 3 6=HDBT2
	Reports the numeric equivalent for BYPASS setting (as above)		
S RESET 1	Setups the numerical equivalent for RESET setting (as left)		
S POWER 0/1	0=OFF		1=ON
R POWER	Reports the numeric equivalent for POWER setting (as above)		
PORT 0~8	1=HDMI 4=HDMI 4 7=PC	2=HDMI 2 5=HDBT 1 8=VIDEO	3=HDMI 3 6=HDBT 2 0=Last Memory
VOL + VOL -	Volume Value Volume Value		
ST	FW Version & Source		

**Note:**

1. Only LPCM 2 channel digital audio is supported, please ensure that the source audio is set to LPCM 2 channel audio in order to avoid unnecessary audio noise.
2. RS-232 commands will be not executed unless followed with a carriage return and LF. Commands are case-insensitive.

## 6.7 OSD Menu

1 <sup>st</sup> Layer	2 <sup>nd</sup> Layer	3rd Layer	Remark
DISPLAY	OUTPUT	640X480 60	
		800x600 60	
		1024x768 60	
		1280x768 60	
		1360x768 60	
		1280x720 60	
		1280x800 60	
		1280x1024 60	
		1440x900 60	
		1400x1050 60	
		1680x1050 60	
		1600x1200 60	
		1920x1080 60	
		1920x1200 60	
		720X480P 60	
		1280X720P 60	
		1920X1080I 60	
		1920X1080P 60	
		720X576P 50	
		1280X720P 50	
		1920X1080I 50	
		1920X1080P 50	

DISPLAY	SIZE	OVER SCAN	
		FULL	
		FOLLOW INPUT	
		PAN SCAN	
		LETTER BOX	
		UNDER 2	
		UNDER 1	
	MODE INFO	OFF	
		INFO	
		ON	
	INPUT HDCP (HDMI mode only)	OFF	
		ON	
	PC (PC mode only)	AUTO SETUP	Yes/No(No)
		H_POSITION	0~60
		V_POSITION	0~60
		PHASE	0~31
		CLOCK	
		WXGA/XGA	XGA/WXGA(XGA)
		RESET	Yes/No(No)
COLOR	CONTRAST		0~60(30)
	BRIGHTNESS		0~60(30)
	COLOR	R	0~1023(512)
		G	0~1023(512)
		B	0~1023(512)
		R OFFSET	0~1023(512)
		G OFFSET	0~1023(512)
		B OFFSET	0~1023(512)
	HUE		0~60(30)
	SATURATION		0~60(30)
	SHARPNESS		0~30(0)
	NR.	OFF	
		LOW	
		MIDDLE	
		HIGH	




AUDIO	VOLUME		0~100(100)
	DELAY	OFF	
		40mS	
		110mS	
		150mS	
	SOUND	ON	
		MUTE	
	SOURCE (HDMI mode only)	AUTO	
		EXT.	
SETUP	FACTORY RESET		OSD Setting back to factory default
	KEY LOCK	OFF	
		ON	
	POWER SAVE	OFF	
		ON	
	IP MODE	DHCP	
		STATIC	
	SET STATIC IP	IP ADDRESS	0.0.0.0~ 255.255.255.255 (192.168.0.1)
		SUBNET MASK	0.0.0.0~ 255.255.255.255 (255.255.255.0)
		Def. GATWAY	0.0.0.0~ 255.255.255.255 (192.168.0.254)
	FREERUN COLOR	BLUE	
		BLOCK	
	MISC.	HDBTOUT (UART1)	HDBT1~2(HDBT1)
		Auto Scan	OFF
			ON
INFORMATION	INPUT:		
	OUTPUT:		
	REVISION:		
	IP ADDRESS:		

## 6.8 Telnet Control

Before attempting to use the Telnet control, ensure that both the Scaler (via the LAN port) and the PC/Laptop or control system being used are connected to the same active network.

To access the Telnet control in Windows 7, click on the 'Start' menu and type 'cmd' into the Search field then press Enter (see below for reference). Under Windows XP, go to the 'Start' menu and click on 'Run', type 'cmd' then press Enter.

Under Mac OS X, go to the file menu then navigate to Go→Applications→Utilities→Terminal (see below for reference).

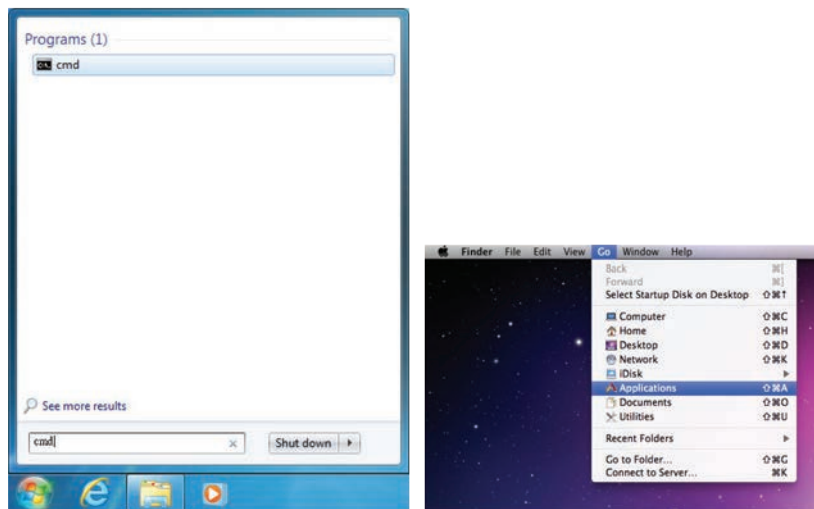

Once in the command line interface (CLI) type 'telnet' along with the IP address of the unit you wish to control (see below for reference).

This will bring us into the device which we wish to control.

```
Microsoft Windows [Version 6.1.7601]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\Administrator>telnet 192.168.5.80 23
```

**Note:** The IP address can be obtained from the OSD menu under Information. If the IP is changed then the IP Address required for Telnet access will also need to be changed accordingly.

Type '?' to list all the available commands (see below for reference).

```
=====
Telnet command service
command '?' for help
command 'quit' for quit
=====
?
=====
command
=====
$ POWER n // n:0~1 ,0:Off 1:On
R POWER //
$ SOURCE n // n:1~8
R SOURCE //
$ OUTPUT n // n:0~21
R OUTPUT //
$ SIZE n // n:0~6
R SIZE //
$ INPUTHDCP n // n:0~1 ,0:Off 1:On
R INPUTHDCP //
$ CONTRAST n // n:0~60
R CONTRAST //
$ BRIGHTNESS n // n:0~60
R BRIGHTNESS //
$ HUE n // n:0~60
R HUE //
$ SATURATION n // n:0~60
R SATURATION //
$ SHARPNESS n // n:0~30
R SHARPNESS //
$ NR n // n:0~3
R NR //
$ VOLUME n // n:0~100
R VOLUME //
$ AUDIODELAY n // n:0~3
R AUDIODELAY //
$ AUDIOMUTE n // n:0~1 ,0:On 1:Mute
R AUDIOMUTE //
$ HDMIAUDIO n // n:0~1 ,0:Auto 1:Ext.
R HDMIAUDIO //
$ KEY LOCK n // n:0~1 ,0:Off 1:On
R KEY LOCK //
$ FREERUNCOLOR n // n:0~1 ,0:Black 1:Blue
R FREERUNCOLOR //
$ HDBTUART n // n:0~1 ,0:HDBT1 1:HDBT2
R HDBTUART //
$ AUTOSCAN n // n:0~1 ,0:Off 1:On
R AUTOSCAN //
$ BYPASS n // n:1~6
R BYPASS //
$ RESET n // n:1
PORT n // n:0~8
ST // Show Status & fw version
VOL + // Volume Up
VOL - // Volume Down
GETIP // Show IP Config
=====
OK
```

**Note:** All commands will not be executed unless followed by a carriage return. Commands are case-insensitive.

## 6.9 WebGUI Control

On a PC/Laptop that is connected to same active network as the Scaler, open a web browser and type device's IP address on the web address entry bar. The browser will bring up the control page of the Scaler (see below for reference).

# SCALER BOX

POWER

POWER: ON

INPUT

SOURCE: Video

STATUS

INPUT: No Signal  
 OUTPUT: 1280x720P 60  
 REVISION: 2.22

DISPLAY

OUTPUT: 1280x720P 60  
 SIZE: FULL  
 MODE INFO: ON  
 INPUT HDCP: ON

COLOR

CONTRAST: 30  
 BRIGHTNESS: 30  
 R: 512  
 G: 512  
 B: 512  
 R OFFSET: 512  
 G OFFSET: 512  
 B OFFSET: 512  
 HUE: 30  
 SATURATION: 30  
 SHARPNESS: 0  
 NR: OFF

AUDIO

VOLUME: 100  
 DELAY: OFF  
 SOUND: ON  
 SOURCE: AUTO

PC


AUTO SETUP: NO  
 H-POSITION: 0  
 V-POSITION: 0  
 PHASE: 0  
 CLOCK: 0  
 WXGA/XGA: XGA  
 RESET: NO

SETUP

FACTORY RESET: NO  
 KEY LOCK: OFF  
 POWER SAVE: OFF  
 FREEUN COLOR: BLUE  
 HDBTOUT(UART): HDBT1  
 AUTO SCAN: OFF

**Note:** The IP address can be obtained from the OSD menu under Information. If the IP is changed then the IP Address required for Telnet access will also needs to be changed accordingly.

7. CONNECTION DIAGRAM

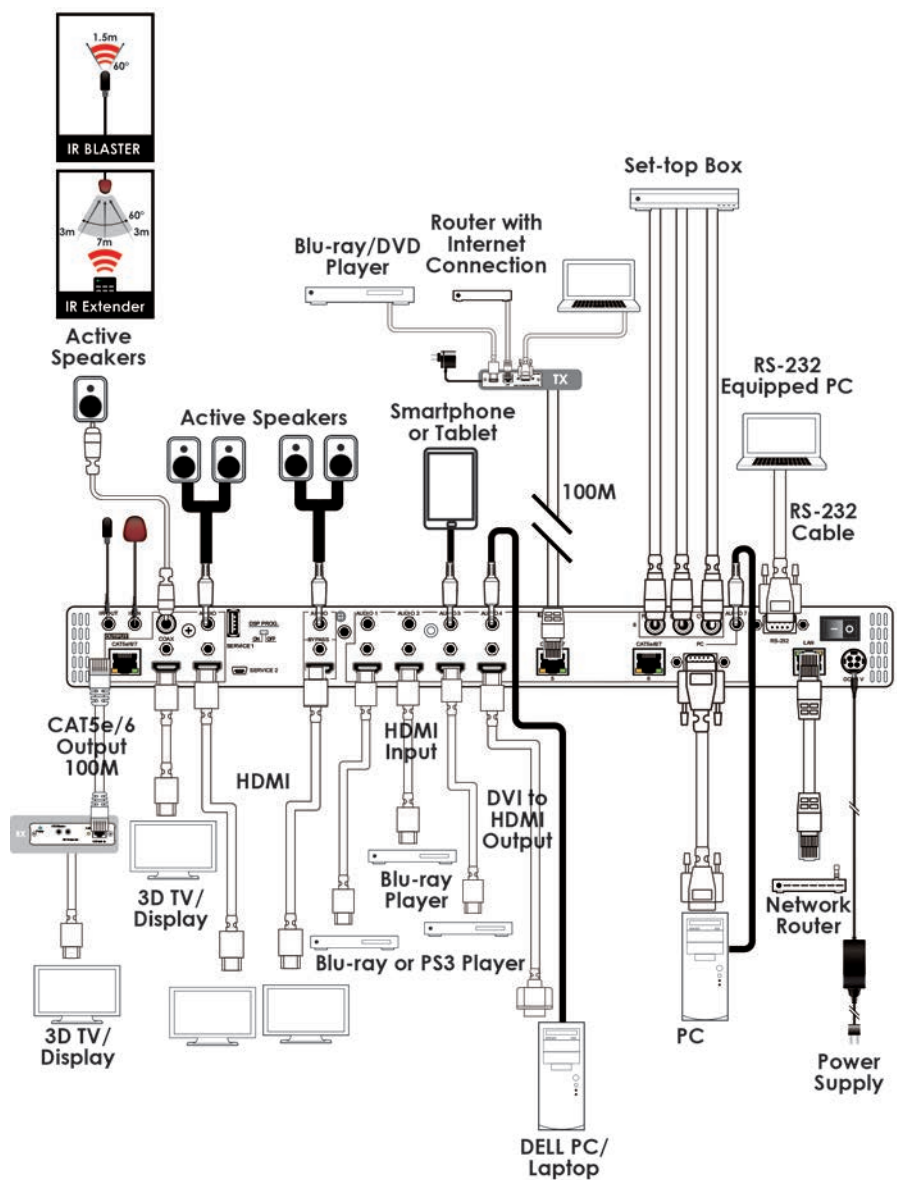

## 8. SPECIFICATIONS

<b>Frequency bandwidth</b>	Up to 10.2Gbps
<b>Input Ports</b>	4 x HDMI 4 x L/R 2 x CAT5e/6/7 1 x PC + L/R 1 x CV+L/R 2 x USB (Service only) 1 x LAN 1 x RS-232 1 x IR
<b>Output ports</b>	2 x HDMI 1 x HDMI Bypass 1 x CAT5e/6/7 1 x Coaxial 1 x L/R
<b>Resolution</b>	480i~1080p@50/60, 1080p@24, VGA~WUXGA(RB)
<b>Audio Format</b>	LPCM 2CH
<b>ESD Protection</b>	Human body model: ±8kV (air-gap discharge) ±4kV (contact discharge)
<b>Power Supply</b>	24VDC/2.7A (US/EU standards, CE/FCC/UL certified)
<b>Dimensions</b>	438mm (W) x 269mm (D) x 44mm (H)/Jack Excluded 438mm (W) x 275mm (D) x 44mm (H)/Jack Included
<b>Weight</b>	3410g
<b>Chassis Material</b>	Metal
<b>Silkscreen Color</b>	Black
<b>Operating Temperature</b>	0°C~40°C / 32°F ~ 104°F
<b>Storage Temperature</b>	-20°C~60°C / -4°F ~ 140°F
<b>Relative Humidity</b>	20~90% RH (no condensation)
<b>Power Consumption</b>	

## 8.1 Input Resolution Support

INPUT RESOLUTION	CV	PC	HDMI
NTSC/PAL	✓	-	-
480i/576i	-	-	✓
480p/576p	-	-	✓
720p@50/60 Hz	-	-	✓
1080i@50/60 Hz	-	-	✓
1080p@50/60 Hz	-	-	✓
VGA@60/72/75 Hz	-	✓	✓
SVGA@56/60/72/75 Hz	-	✓	✓
XGA@60/70/75 Hz	-	✓	✓
SXGA@60/75 Hz	-	✓	✓
UXGA@60 Hz	-	✓	✓
1280×800@60 Hz	-	✓	✓
1680×1050RB@60 Hz	-	✓	✓
1920×1080@60 Hz	-	✓	✓
1920 x 1200@60RB		✓	✓
1080p@24/25/30 Hz			✓

## 8.2 Output Resolution Support

OUTPUT RESOLUTION	HDMI
480p/576p	✓
720p@50/60 Hz	✓
1080i@50/60 Hz	✓
1080p@50/60 Hz	✓
VGA@60 Hz	✓
SVGA@60 Hz	✓
XGA@60 Hz	✓
SXGA@60 Hz	✓
UXGA@60 Hz	✓
1280×768@60 Hz	✓
1280×800@60 Hz	✓
1360×768@60 Hz	✓
1400×1050@60 Hz	✓
1440×900@60 Hz	✓
1680×1050@60 Hz	✓
1920×1200@60 Hz	✓



## 9. ACRONYMS

ACRONYM	COMPLETE TERM
<b>COMP</b>	Component Video
<b>CV</b>	Composite Video
<b>DVI</b>	Digital Visual Interface
<b>EDID</b>	Extended Display Identification Data
<b>HDCP</b>	High-Bandwidth Digital Content Protection
<b>HDMI</b>	High-Definition Multimedia Interface
<b>IR</b>	Infrared
<b>OSD</b>	On-screen Display (Menu)
<b>USB</b>	Universal Serial Bus
<b>UXGA</b>	Ultra Extended Graphics Array
<b>VGA</b>	Video Graphics Array
<b>XGA</b>	Extended Graphics Array
<b>WUXGA</b>	Wide Ultra Extended Graphics Array





[www.egerate.com](http://www.egerate.com)

[www.geratech.eu](http://www.geratech.eu)