

SLO Insulated Wrench Operating Instructions

(Rev 2.1 4/11/17)

Ref. Item # 500204


SLO Insulated Wrenches

- For use on electrical systems up to 1000 volts.
- Reduces possibility of shorting or shock.
- PVC heat shrink insulation.
- May be used for torque on battery terminals.

Calibrating Torque Wrenches



To calibrate torque wrenches either use a torque tester or torque sensor within the range of the torque wrench. For click wrenches calibrate torque in "First Peak" mode with a digital analyzer or transducer. Make sure to apply the torque slowly and smoothly at the "Load Point Line" near end of the handle.

1. Select a torque tester or torque sensor that covers the torque range of the wrench. Connect wrench to the torque tester or torque sensor using the appropriate adapters as needed (not supplied).
2. Apply torque clockwise slowly until wrench 'clicks' and note reading.
3. Adjust wrench to required torque setting as described below.
4. Test and repeat adjustment as necessary to obtain desired value.
5. Recalibrate torque wrench at prescribed intervals.

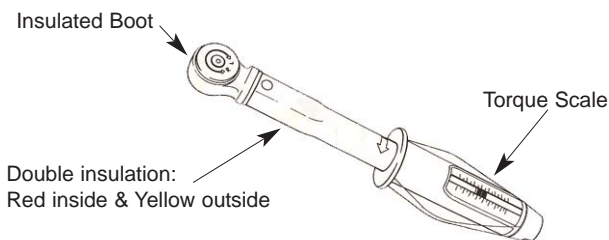

Adjusting Torque Setting

1. Use the adjustment knob to change torque setting.
2. Swing lever clockwise to increase torque or counterclockwise to decrease torque.

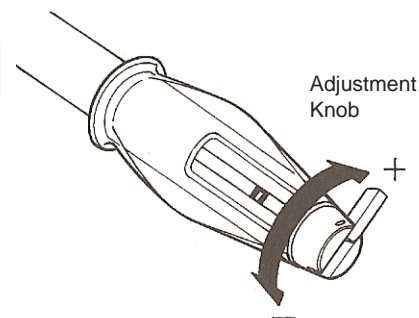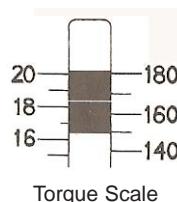


Applying Torque

1. Toward the end of the wrench is the "Load Point Line." Grab handle at that "Load Point" end to apply torque. (If you grab handle closer toward head, then you will apply more torque than what the wrench is set for. The wrench is a length dependent tool).
2. Tighten nut or bolt by applying a steady even pull using built in ratchet as necessary. Wrench should be kept at 90 degrees to axis of bolt during tightening. When pre-set torque is reached, the wrench will 'click.'
3. After the "click", do not apply any more torque or you will over tighten it.

Note:

- Best protection for the operator is using an insulated socket with the wrench.
- For operator protection, red insulation is underneath the yellow insulation. Once the red is visible, remove for service.

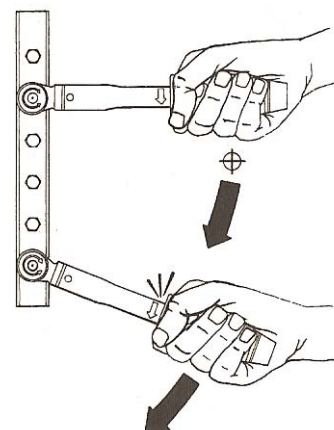



SLO Insulated Wrench Operating Instructions

(Rev 2.1 4/11/17)

Ref. Item # 500204

Mountz Calibration & Repair Services

Mountz Inc. features an experienced calibration and repair staff. Our trained technicians can calibrate and repair most any tool. Mountz provides rapid service with quality that you can trust as we offer three state-of-the-art calibration lab and repair facilities that can calibrate up to 20,000 lbf.ft.

Since 1965, Mountz Inc. has proven its in-depth knowledge of torque and torque solutions by consistently developing, producing, marketing and servicing highly sophisticated, cutting-edge tools. We perform calibrations in accordance with ANSI/NCSSL-Z540. Mountz is dedicated solely to the manufacturing, marketing and servicing of high quality torque tools.

Tool Service & Repair Capability

- Torque Wrench Calibration: Click Wrench, Dial Torque Wrench, Beam Wrench, Cam-Over & Break-Over Wrench
- Torque Screwdrivers: Dial, Micrometer, Preset & Adjustable
- Torque Analyzers/Sensors: All brands
- Electric Screwdrivers: All brands
- Air Tools: All brands
Impact Wrenches, Drills, Pulse Tools, Grinders, Percussive Tools, Air Screwdrivers, Nutrunners, DC Controlled Nutrunners
- Torque Multipliers: All brands

Mountz Torque Testers and Calibration Equipment

Torque tools go out of calibration with use. Calibrating a torque tool is a fine-tuning process of bringing the tool back within its tolerance. Torque testers can also be used for quick tools tests on the line or in the lab to determine whether torque tools are holding a given setting.

A regular torque tool calibration and re-calibration guarantees the operator repeatable accuracy and adherence to international standards. Torque testing also ensures torque equipment is operating to peak performance and can highlight potential tooling problems before they arise perhaps due to tool wear or broken components.

Controlling torque is essential for companies to ensure their product's quality, safety and reliability isn't compromised. The failure of a three-cent fastener that isn't properly tightened can lead to catastrophic or latent failures. Fasteners that are insufficiently torqued can vibrate loose and excessive torque can strip threaded fasteners. Using a quality torque tool has become increasingly important for many companies to ensure that proper torque is being applied and maintains gauge requirements associated with the ISO 9001 Quality Standard. Look for the Mountz hexagon logo - it's a stamp for quality tools, service and knowledge in the field of torque control.

Mountz Service Locations

Eastern Service Center

19051 Underwood Rd.
Foley, AL 36535
Phone: (251) 943-4125
Fax: (251) 943-4979

Western Service Center

1080 N.11th Street
San Jose, CA 95112
Phone: (408) 292-2214
Fax: (408) 292-2733

www.mountztorque.com
sales@mountztorque.com



Twitter: @mountztorque

Download a "Service Form" and include a copy when you send the tools in to be serviced.

Looking for fasteners?
www.mrmetric.com

**mr.
metric**