


geratech®



# EGE-UHD-5HDB-848

8×8 4K UHD HDMI over CAT5e/6/7  
100m Matrix with PoC, IR, LAN Serving

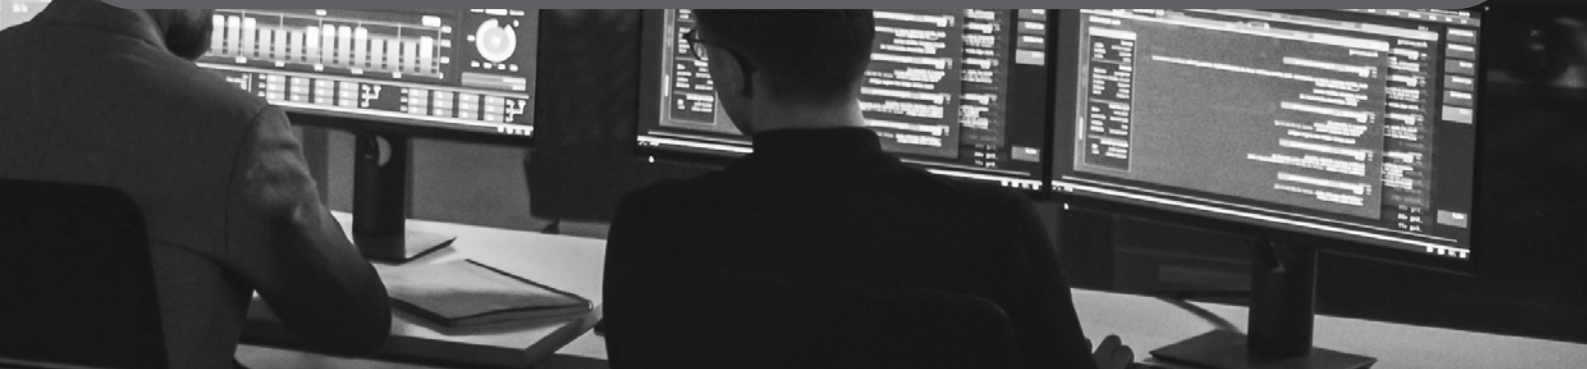



## **DISCLAIMERS**

The information in this manual has been carefully checked and is believed to be accurate. Geratech assumes no responsibility for any infringements of patents or other rights of third parties which may result from its use. Geratech assumes no responsibility for any inaccuracies that may be contained in this document. Geratech also makes no commitment to update or to keep current the information contained in this document. Geratech reserves the right to make improvements to this document and/or product at any time and without notice.

## **COPYRIGHT NOTICE**

No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or any of its part translated into any language or computer file, in any form or by any means— electronic, mechanical, magnetic, optical, chemical, manual, or otherwise— without express written permission and consent from Geratech.

© Copyright 2014 by Geratech.

All Rights Reserved.

Version 1.0 June 2014

## **TRADEMARK ACKNOWLEDGMENTS**

All products or service names mentioned in this document may be trademarks of the companies with which they are associated.

**SAFETY PRECAUTIONS**

Please read all instructions before attempting to unpack, install or operate this equipment and before connecting the power supply.

Please keep the following in mind as you unpack and install this equipment:

- Always follow basic safety precautions to reduce the risk of fire, electrical shock and injury to persons.
- To prevent fire or shock hazard, do not expose the unit to rain, moisture or install this product near water.
- Never spill liquid of any kind on or into this product.
- Never push an object of any kind into this product through any openings or empty slots in the unit, as you may damage parts inside the unit.
- Do not attach the power supply cabling to building surfaces.
- Use only the supplied power supply unit (PSU). Do not use the PSU if it is damaged.
- Do not allow anything to rest on the power cabling or allow any weight to be placed upon it or any person walk on it.
- To protect the unit from overheating, do not block any vents or openings in the unit housing that provide ventilation and allow for sufficient space for air to circulate around the unit.

**REVISION HISTORY**

VERSION NO.	DATE DD/MM/YY	SUMMARY OF CHANGE
RDV1	20/05/14	Preliminary Release
RDV2	19/09/14	Add RS-232 Command

**CONTENTS**

<b>1. INTRODUCTION .....</b>	<b>1</b>
<b>2. APPLICATIONS .....</b>	<b>1</b>
<b>3. PACKAGE CONTENTS .....</b>	<b>1</b>
<b>4. SYSTEM REQUIREMENTS .....</b>	<b>1</b>
<b>5. FEATURES .....</b>	<b>2</b>
<b>6. OPERATION CONTROLS AND FUNCTIONS .....</b>	<b>2</b>
<b>6.1 Front Panel.....</b>	<b>2</b>
<b>6.2 Rear Panel.....</b>	<b>3</b>
<b>6.3 Side Panel .....</b>	<b>4</b>
<b>6.4 Remote Control.....</b>	<b>4</b>
<b>6.5 IR Cable Pin Assignment .....</b>	<b>5</b>
<b>6.6 RS-232 Pin Assignment .....</b>	<b>5</b>
<b>6.7 RS-232 &amp; Telnet Commands.....</b>	<b>5</b>
<b>6.8 RS-232 UART Command Illustration Diagram .....</b>	<b>7</b>
<b>6.9 Telnet Control .....</b>	<b>9</b>
<b>6.10 Web GUI Control.....</b>	<b>11</b>
<b>7. CONNECTION DIAGRAM .....</b>	<b>13</b>
<b>8. SPECIFICATIONS.....</b>	<b>15</b>
<b>8.1 CAT5e/6/7 Cable Specification .....</b>	<b>15</b>
<b>8.2 Support Timing Chart .....</b>	<b>16</b>
<b>9. ACRONYMS.....</b>	<b>16</b>



## 1. INTRODUCTION

The 4K2K 8 by 8 HDMI Matrix over CAT5e/6/7 supports the transmission of video (resolutions up to 4K2K Full HD), multi-channel digital audio and control via IR, RS-232, Telnet or Web GUI from eight high definition sources to eight outputs over a single CAT5e/6/7 cable (up to 100m) for each output. It supports high resolution digital audio formats such as LPCM 7.1CH, Dolby TrueHD, Dolby Digital Plus and DTS-HD Master Audio as well as 3D content that can be displayed when connecting a 3D TV and 3D source. Additionally, the LAN connectivity will allow a 100BaseT network to be served to smart TVs or games consoles. The Power over Cable (PoC) function can power compatible receivers, providing greater flexibility in installations.

## 2. APPLICATIONS

- HDMI Matrix System
- Video/TV wall display and control
- Security surveillance and control
- Commercial advertising, display and control
- University lecture hall, display and control
- Retail sales and demonstration

## 3. PACKAGE CONTENTS

- 4K2K 8×8 HDMI Matrix over CAT5e/6/7
- 2×IR Extender
- 2×IR Blaster
- 2×24 V/6.25 A DC Power Adaptor (1 for PoC)
- 2×Power Cord
- 1×IR Remote Control with battery
- 1×Left and Right Ear Rack Set
- Operation Manual

## 4. SYSTEM REQUIREMENTS

- HDMI equipped source devices, connect with HDMI cables or DVI equipped source, connect with DVI to HDMI cables
- HDMI equipped displays (TVs or monitors) or HDMI equipped AV receivers, connect with HDMI cables
- Industry standard CAT5e/6/7 cables
- HDBaseT™ Receivers

## 5. FEATURES


- HDMI, HDCP 1.1 and DVI compliant
- Supports resolutions VGA~WUXGA, 4K2K@24/25/30 & YUV\_420 and 480i~1080p dependent upon the output display's EDID settings
- Supports distances up to 100 meters through CAT6/7 cables
- Supports 3D signal display dependent upon the output display EDID settings
- Supports PoC (Power over Cable) on compatible receivers only
- Supports HDMI input up to 15 meters at 8-bit resolution or 10 meters at 12-bit resolution
- Supports bi-directional IR from input and output locations
- Supports RS-232, remote control, on-panel control and IP Control (Telnet & Web GUI)
- Supports LAN serving function through the LAN port
- 2U size design
- Supports external and internal EDID settings
- Supports LPCM 7.1CH, Dolby TrueHD, Dolby Digital Plus and DTS-HD Master Audio transmission

### Note:

1. The PoC function is designed for powering compatible receiver units only—non-PoC receivers will need their own power supply. Receivers of another brand may not be compatible.
2. Do not connect the LAN port to CAT outputs of this device or to CAT inputs or receiver. Doing so may damage the unit.
3. Do not connect more than one Ethernet/network link within the Matrix system, doing so may trigger the device to shoot down.

## 6. OPERATION CONTROLS AND FUNCTIONS

### 6.1 Front Panel

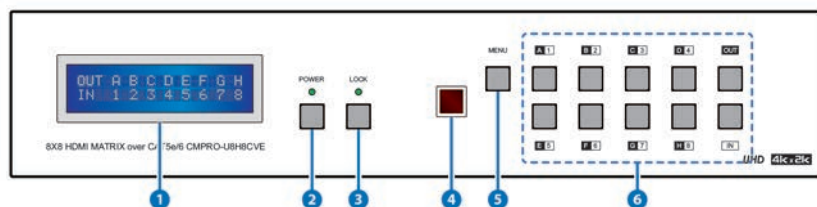

- 1 **LCM** : Displays the setting information of each input and output setting.
- 2 **POWER**: Press this button to power the device on/off. The LED will illuminate green when the power is on, red when it is in 'Standby' mode.
- 3 **LOCK**: Press this button for 3 seconds to lock all the buttons on the panel; press again for 3 seconds to unlock. The LED will illuminate green when locked.
- 4 **IR WINDOW**: Accepts the remote control signal of this device only.

**MENU:** Press this button to access the LCM menu system, from here EDID settings can be managed and IP system settings are displayed.


**1~8/A~H and In/Out:** Press the Out or In button to select the output or input mode and then press the required number button to make the selection accordingly.

For example, if outputs A~D need to be set to input 1 and outputs E~H need to be set to input 2, then the following sequence of button presses need to be performed:

Press: Out >A>B>C>D>In>1>Menu,  
and then press: Out>E>F>G>H>In>2>Menu.

**Note:** If the menu button is not pressed the selection will not be changed.

## 6.2 Rear Panel

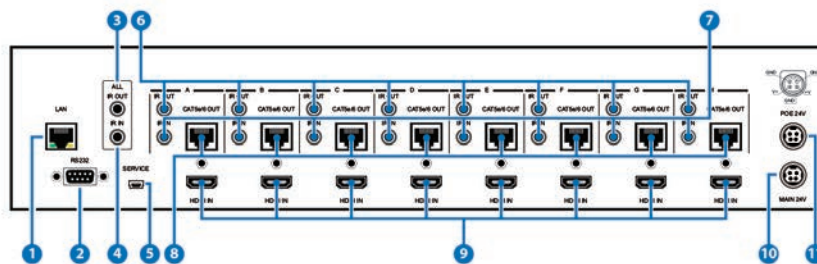


- 1 LAN:** Connect to an active network for LAN serving and Telnet and Web GUI control (refer to Sections 6.8 and 6.9). When the Matrix or any compatible LAN equipped receivers are connected to a network, this allows the network access (including internet access if available) to be shared between the Matrix and all connected receivers. Connect any Ethernet equipped device e.g. a Smart TV or games console to the LAN port of a receiver for that device to share the network/ internet access.

**Warning:** Please do not connect this port directly to the PC/Laptop as the Telnet function will not work.
- 2 RS-232:** Connect to a PC or control system with D-Sub 9-pin to control the matrix with RS-232 commands (refer to Sections 6.6 and 6.7).
- 3 ALL IR OUT:** Connect an IR Blaster for IR signal transmission to the source/ input location. Place the IR Blaster in direct line-of-sight of the equipment to be controlled. It will transmit all IR signals received by any IR extenders connected to the matrix or receivers.
- 4 ALL IR IN:** Connect an IR extender for IR signal reception. Ensure that remote being used is within the direct line-of-sight of the IR extender. IR signals received will be transmitted by all IR blasters connected to the matrix or receivers.
- 5 SERVICE:** Manufacturer use only.
- 6 IR OUT 1~8:** Connect to the IR blasters for IR signal transmission. Place the IR blaster in direct line-of-sight of the equipment to be controlled. It will transmit the IR signal received from IR extenders connected to the matrix or receivers according to the selected input.



- 7 **IR IN 1~8:** Connect to the IR extenders for IR signal reception. Ensure that remote being used is within the direct line-of-sight of the IR extender. The IR signal will be transmitted to the selected receiver's IR OUT.
- 8 **CAT5e/6/7 OUT 1~8:** Connect from these CAT outputs to the CAT input port of the receiver units with a single CAT5e/6/7 cable for HDMI Audio/Video and IR/RS-232 control signal transmission.  
*Warning: Please do not connect the CAT5e/6/7 output into the receiver's LAN port.*
- 9 **HDMI IN 1~8:** Connect to the HDMI input source devices such as a DVD player or a Set-top Box with HDMI cable or DVI to HDMI cable.
- 10 **DC 24V MAIN POWER:** Plug the 24 V DC power supply into the unit and connect the adaptor to an AC outlet.
- 11 **PoC 24V:** Plug the 24 V PoC power supply into the unit and connect the adaptor to an AC outlet. This unit will power PoC (Power over Cable) capable receiver units.


### 6.3 Side Panel

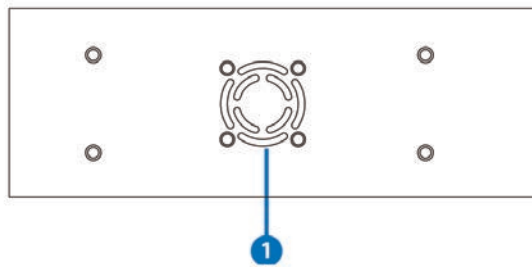


- 1 **Fan Ventilator:** These are air ventilation areas, DO NOT block these areas or cover it with any object. Please allow adequate space around the unit for air circulation.

### 6.4 Remote Control

- 1 **POWER:** Press this button to switch on the device or set it to standby mode.
- 2 **IN:** Input ports selection 1~8.
- 3 **OUT:** Output ports selection A~H.

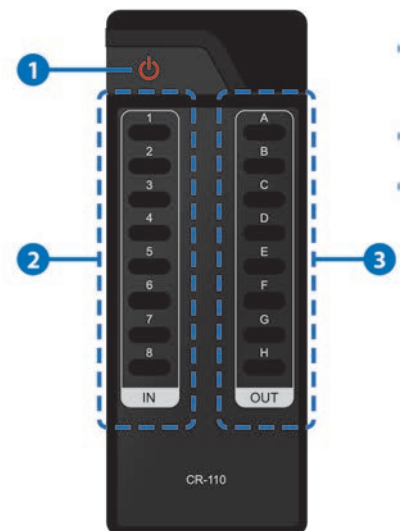

## 6.5 IR Cable Pin Assignment

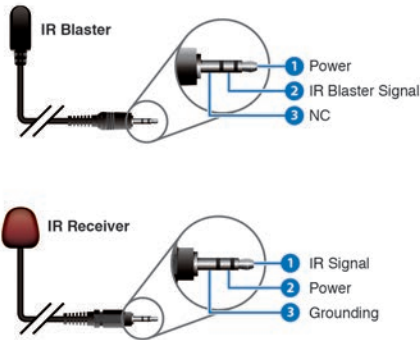

## 6.6 RS-232 Pin Assignment

MATRIX	
PIN	Assignment
1	NC
2	Tx
3	Rx
4	NC
5	GND
6	NC
7	NC
8	NC
9	NC

Remote Control Console	
PIN	Assignment
1	NC
2	Rx
3	Tx
4	NC
5	GND
6	NC
7	NC
8	NC
9	NC

Baud Rate: 19200 bps

Data bit: 8 bits

Parity: None

Stop Bit: 1 / Flow Control: None


## 6.7 Telnet & RS-232 Command

Command	Description
A1~A8	Switch Output A to 1~8
B1~B8	Switch Output B to 1~8
C1~C8	Switch Output C to 1~8
D1~D8	Switch Output D to 1~8
E1~E8	Switch Output E to 1~8
F1~F8	Switch Output F to 1~8
G1~G8	Switch Output G to 1~8
H1~H8	Switch Output H to 1~8
ABCD...1~ABCD...8	Switch Output A B C D... to 1~8 at the same time
SETIP <IP> <SubNet> <GW>	Setting IP. SubNet. GateWay (Static IP)

RSTIP	IP Configuration Was Reset To Factory Defaults <DHCP>
IPCONFIG	Display the current IP config
P0	Power off
P1	Power on
STORE 01~08	Store current I/O position(01~08)
PRESET 01~08	Recall current I/O position(01~08)
SHOW 01~08	Show current I/O position(01~08)
NAME N1 N2	Switch all the Output to 1~8
I1~I8	Show unit firmware version
ST	Display the current matrix status and F/W version
RS	System Reset to A1, B2, C3, D4, E5, F6, G7, H8
EM	Setting EDID MODE. 1-STD 2-TV
UARTBAUD1~8	Set output A~D's uart baud rate from 1~6 1: 9600bps 2: 14400bps 3: 19200bps 4: 38400bps 5: 57600bps 6: 115200bps
UARTSW1~8	Switch output's UARTto A~H and allow Matrix to send commands to Receiver's connected RS-232 device.
UARTSW0	Switch output's UART to MCU. Restoring RS-232 control to the Receiver output back to Matrix.
UARTBAUD?	Display all the outputs UART baud
UARTSW?	Display the UART switching state
?	Display all the available commands
QUIT	Exit(for telnet only)

**Note:** Any commands will not be executed unless followed by a carriage return. Commands are case insensitive.

## 6.8 RS-232 UART Command Illustration Diagram

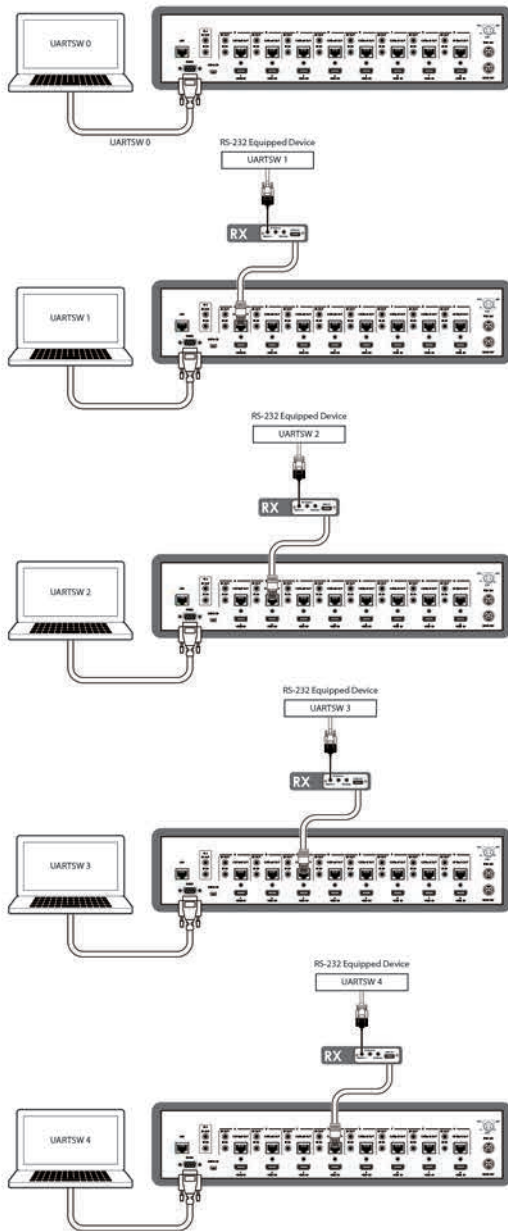


**Note:** This command allows RS-232 to control the Matrix.

**Note:** This command allows RS-232 to control the RS-232 device connected to output A's Receiver.


**Note:** This command allows RS-232 to control the RS-232 device connected to output B's Receiver.

**Note:** This command allows RS-232 to control the RS-232 device connected to output C's Receiver.


**Note:** This command allows RS-232 to control the RS-232 device connected to output D's Receiver.

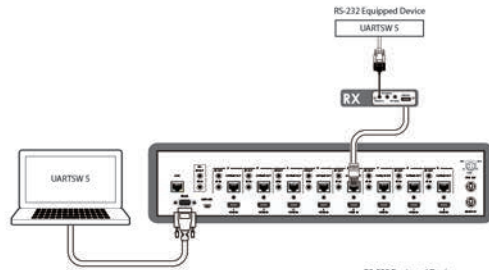


**Note:** This command allows RS-232 to control the RS-232 device connected to output E's Receiver.

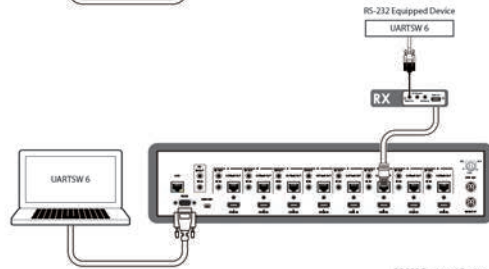

**Note:** This command allows RS-232 to control the RS-232 device connected to output F's Receiver.

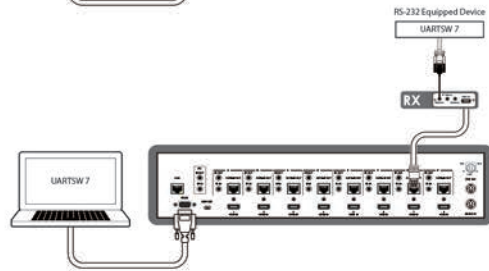


**Note:** This command allows RS-232 to control the RS-232 device connected to output G's Receiver.

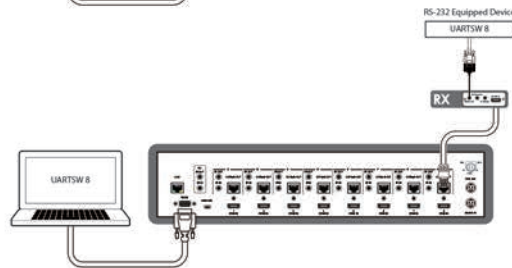

**Note:** This command allows RS-232 to control the RS-232 device connected to output H's Receiver.

## 6.9 Telnet Control

Before attempting to use the telnet control, please ensure that both the Matrix (via the 'LAN port) and the PC/Laptop are connected to the active networks. To access the telnet control in Windows 7, click on the 'Start' menu and type "cmd" in the Search field then press enter. Under Windows XP go to the 'Start' menu and click on "Run", type "cmd" with then press enter. Under Mac OS X, go to Go→Applications→Utilities→Terminal See below for reference.

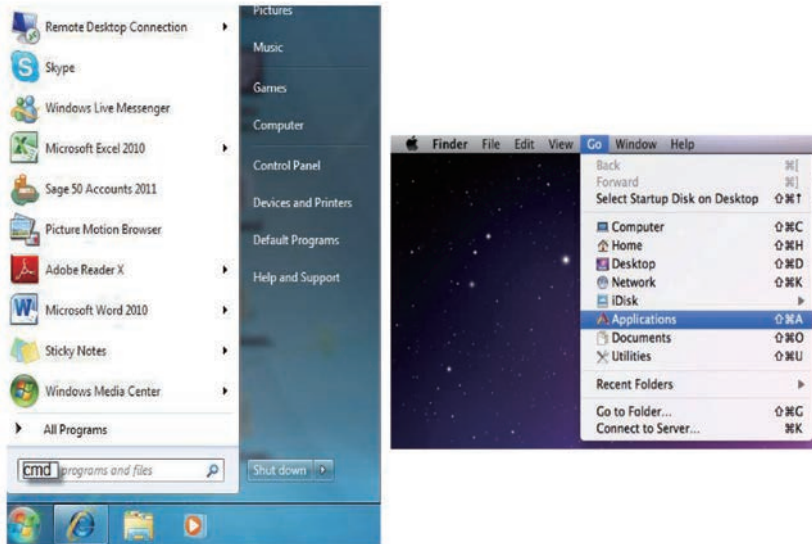

Once in the command line interface (CLI) type "telnet", the IP address of the unit you wish to control and "23", then hit enter.

**Note:** The IP address of the Matrix can be displayed on the device's LCM monitor by pressing the Menu button twice/three times.

```
Microsoft Windows [Version 6.1.7600]
Copyright (c) 2009 Microsoft Corporation. All rights reserved.

C:\Users\CYP>telnet 192.168.5.80 23_
```

This will bring us into the device which we wish to control. Type "HELP" to list the available commands.

```

Telnet 192.168.5.39
telnet-> ?

A1~A8 : Switch Output A to 1~8
B1~B8 : Switch Output B to 1~8
C1~C8 : Switch Output C to 1~8
D1~D8 : Switch Output D to 1~8
E1~E8 : Switch Output E to 1~8
F1~F8 : Switch Output F to 1~8
G1~G8 : Switch Output G to 1~8
H1~H8 : Switch Output H to 1~8
ABCD...1~ABCD...8 : Switch output ABCD... to 1~8 at the same time
SETIP <IP> <SubNet> <GW> : Setting IP.SubNet.GateWay<Static IP>
RSTIP : IP Configuration Was Reset To Factory Defaults<DHCP>
IPCONFIG : Display the current IP config
PO : Power Off
PI : Power On
STORE 01~08: STORE current I/O position <01~08>
PRESET 01~08: RECALL the store I/O position <01~08>
SHOW 01~08: SHOW current port's I/O position <01~08>
NAME N1 N2: NAME the stored port N1<01~08> no more than 8 characters N2<
ABCDEFGH>
I1~I8 : Switch all the output to 1~8
SI : Display the current matrix state and firmware version
RS : System Reset to A1,B2,C3,D4,E5,F6,G7,H8
EM : Setting EDID MODE. 1-STD 2-IU.
UARTBAUD1~UARTBAUD8 : Setting outputA~H's uart baud <1:9600bps,2:14400bps,3:1920
0bps,4:38400bps,5:57600bps,6:115200bps>
UARTSW1~UARTSW8 : Switch output's uart to A~H
UARTSW0 : Switch output's uart to MCU
UARTSW? : Display the uart switching state
? : Display all available commands
QUIT : Exit
    
```

Type “IPCONFIG” To show all IP configurations. To reset the IP, type “RSTIP” and to use a set static IP, type ”SETIP” (For a full list of commands, see Section 6.7).


**Note:** Any commands will not be executed unless followed by a carriage return.

Commands are not case-sensitive. If the IP is changed then the IP Address required for Telnet access will also change accordingly.




## 6.10 Web GUI Control

On a PC/Laptop that is connected to the same active network as the Matrix, open a web browser and type device's IP address on the web address entry bar. The browser will display the device's status, control and User setting pages.

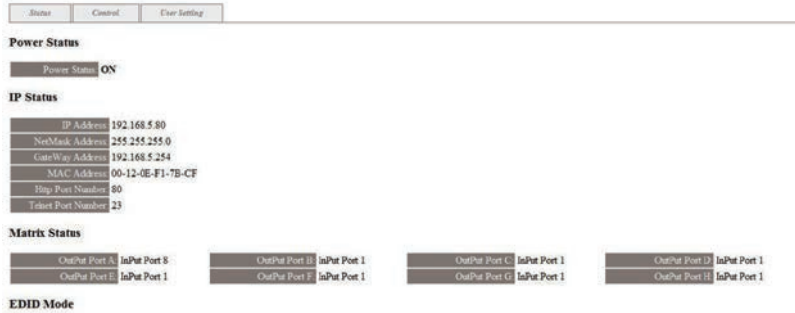

Click on the 'Control' tab to control power, input/output ports, EDID and reset mode.

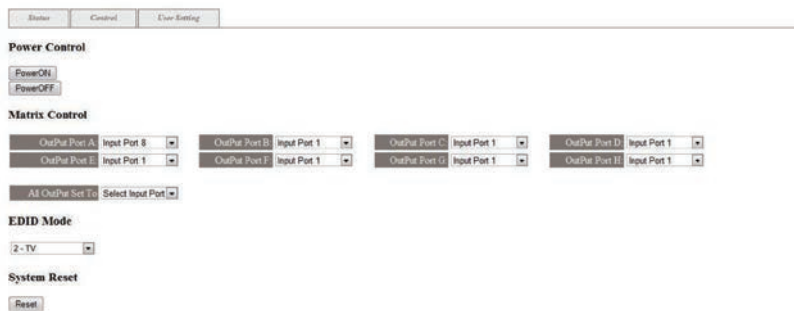



Clicking on the 'User Setting' tab allows you to reset the IP configuration. ask for a reboot of the device every time any of the settings are changed. The IP address needed to access the Web GUI control will also need to be changed accordingly on the web address entry bar.

Status Control **User Setting**

**IP Address Selection**

Address Type: DHCP/AutoIP


Static IP Address: 192.168.1.10


Subnet Mask: 255.255.255.0

Default Gateway: 192.168.1.254

Update Settings

## 7. CONNECTION DIAGRAM

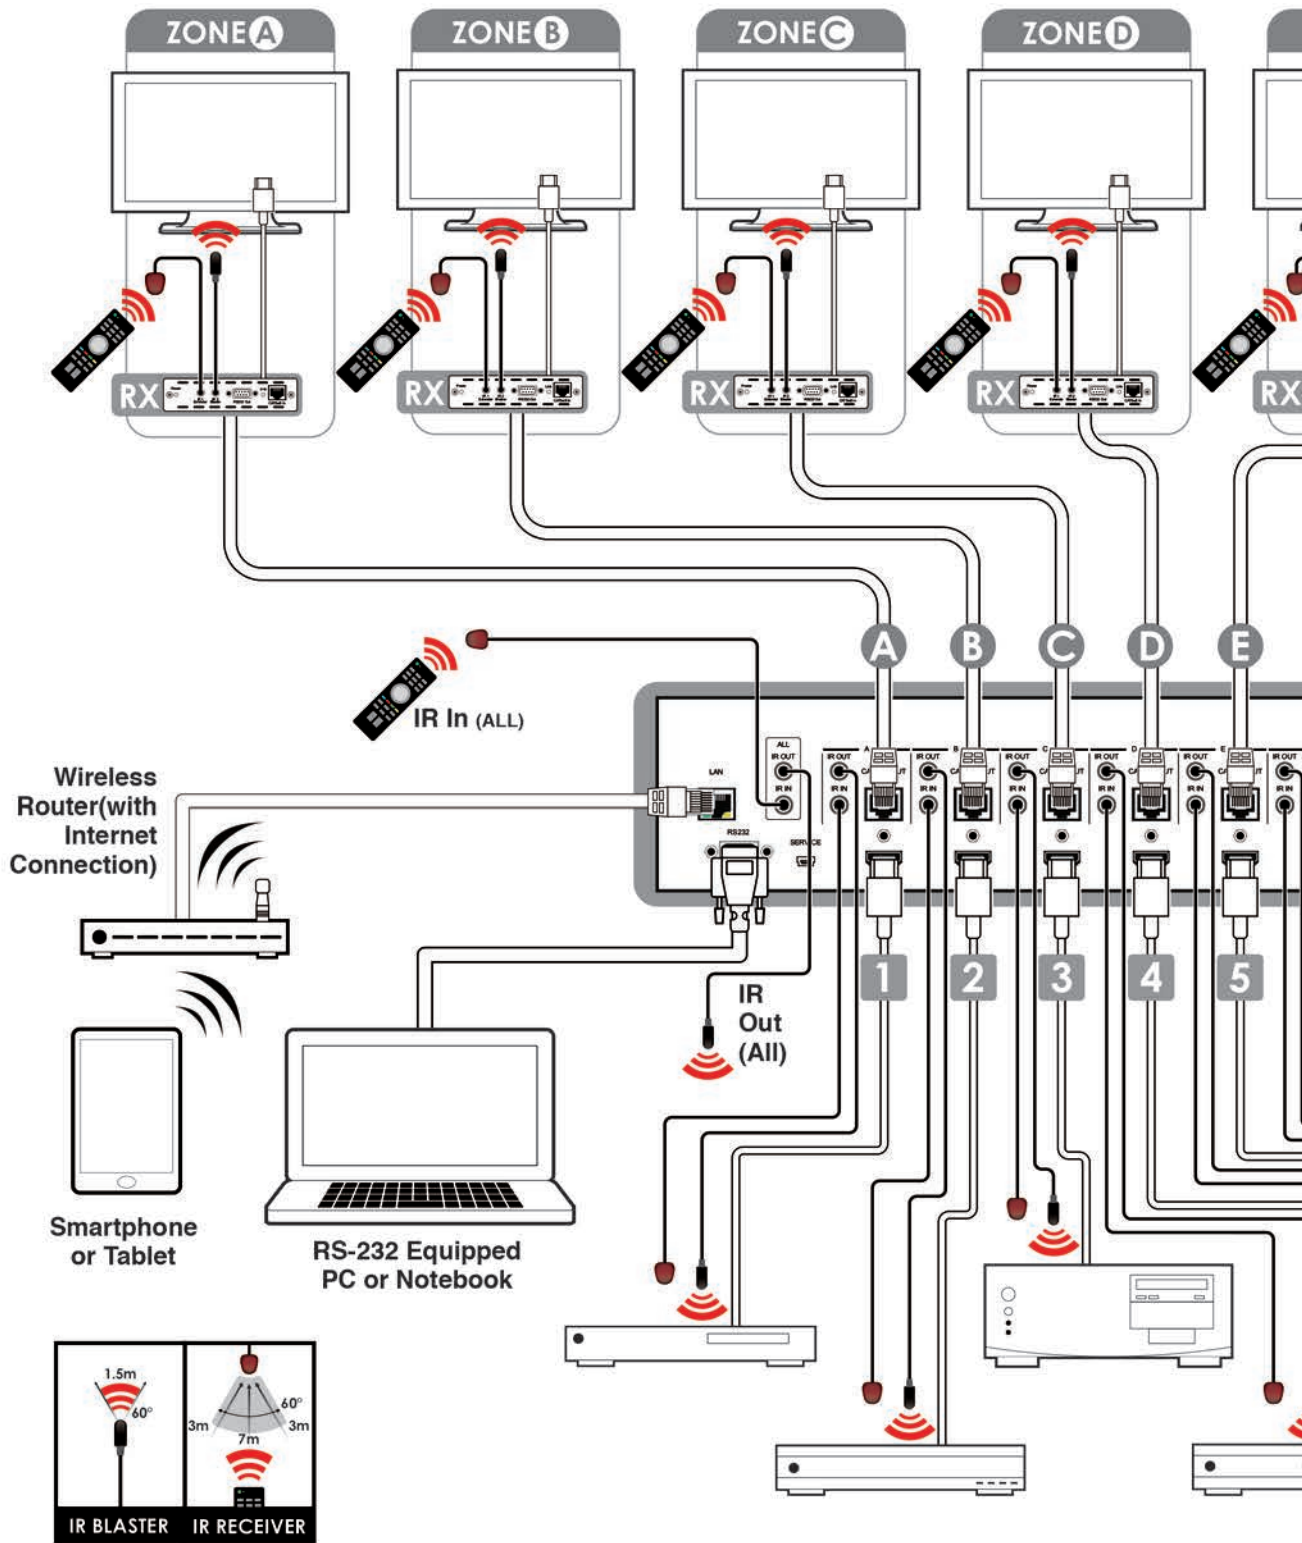

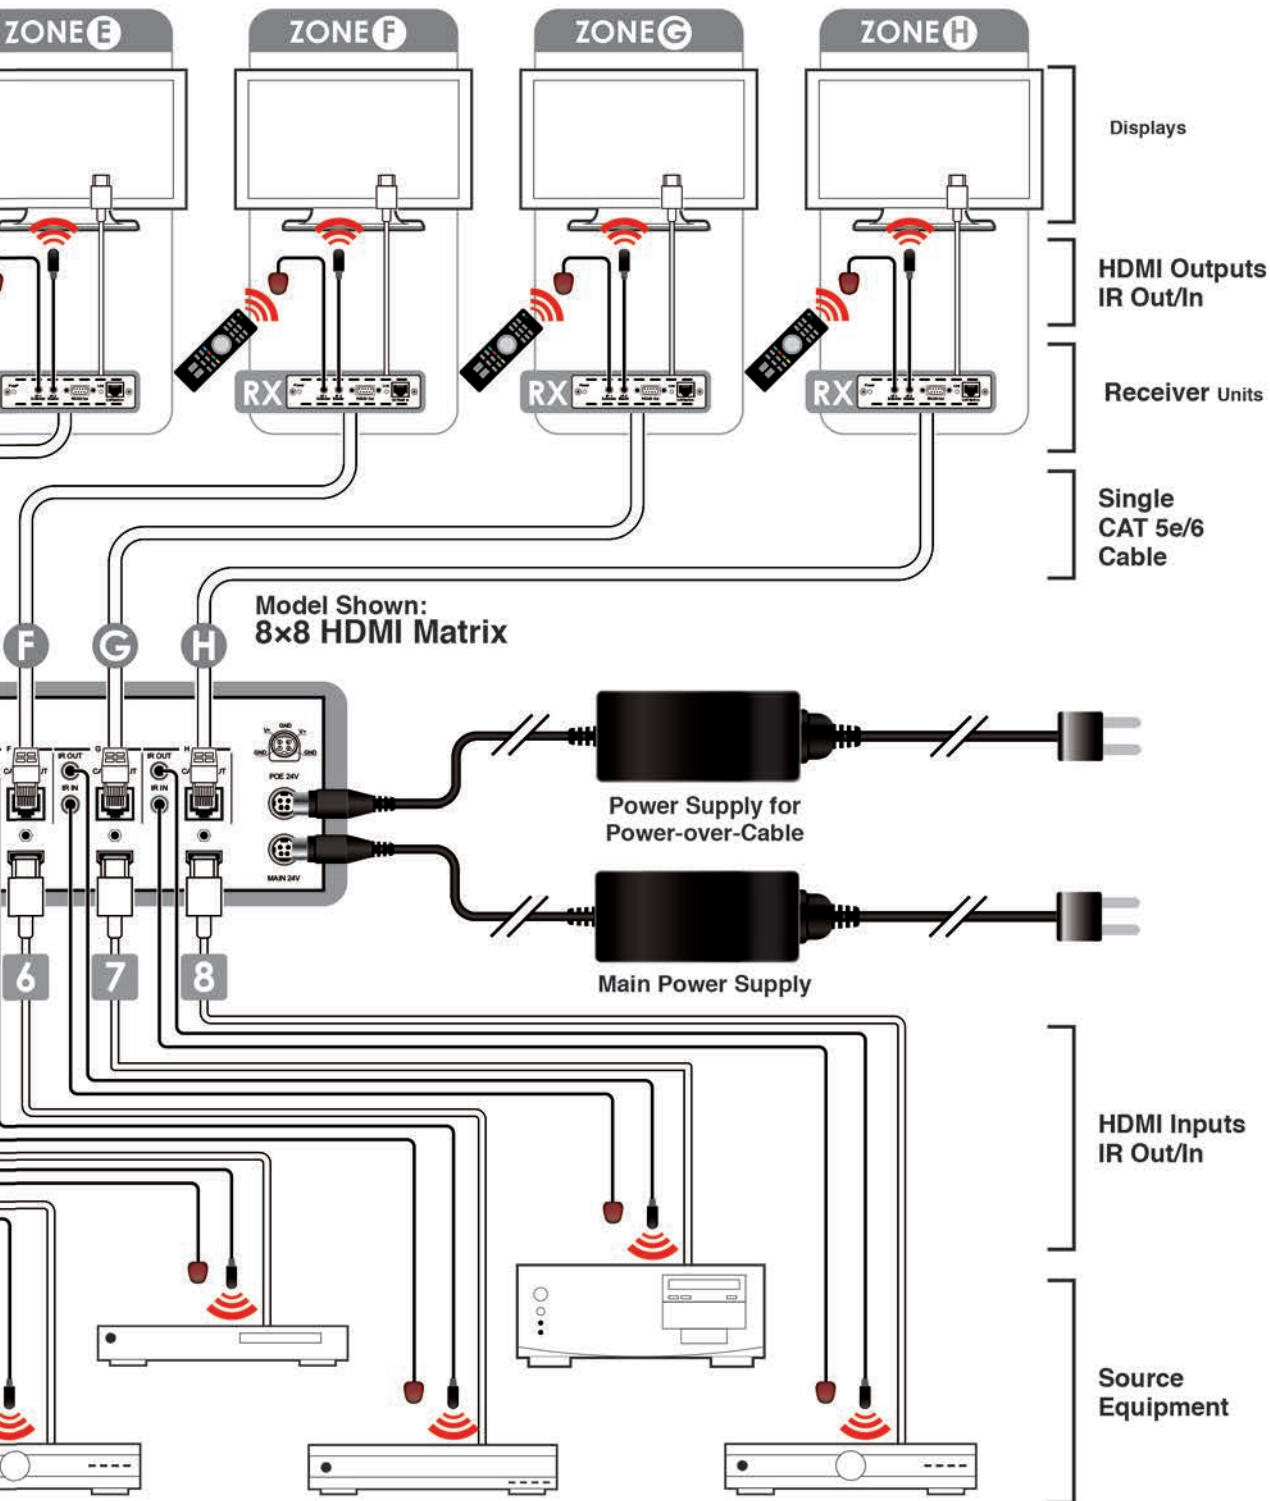

## 8. SPECIFICATIONS

### 8.1 Technical Specifications

<b>Video Bandwidth</b>	300 MHz/9 Gbps
<b>Input Ports</b>	8×HDMI, 9×IR Extender, 1×RS-232, 1×LAN, 1×Mini USB-B type (for firmware update only)
<b>Output Ports</b>	8×CAT5e/6/7, 9×IR
<b>ESD Protection</b>	Human-body Model: ± 8kV (Air-gap discharge) ± 4kV (Contact discharge)
<b>Power Supply</b>	24 V/6.25 A DC (US/EU standards, CE/FCC/UL certified)
<b>Dimensions</b>	438 mm (W)×235 mm (D)×88mm (H)/Jacks Excluded 438 mm (W)×249 mm (D)×93mm (H)/Jacks Included
<b>Weight</b>	4402g
<b>Chassis Material</b>	Metal
<b>Silkscreen Color</b>	Black
<b>Operating Temperature</b>	0 °C~40 °C/32 °F~104 °F
<b>Storage Temperature</b>	-20 °C~60 °C/-4 °F~140 °F
<b>Relative Humidity</b>	20~90 % RH (non-condensing)
<b>Power Consumption</b>	65 W Tx (Main), 56 W Rx (PoE)

### 8.2 CAT5e/6/7 Cable Specification

Cable Type	Range	Pixel clock rate	Video Data Rate	Supported Video
CAT5e/6/ CAT 7	100 m	<225MHz	<5.3Gbps (HD Video)	Up to 1080p, 60 Hz, 36 bits 3D(data rates lower than 5.3 Gbps or below 225 MHz TMDS clock).

## 8.2 Support Timing Chart

	INPUT	OUTPUT
640x480@60/72/75/85	V	V
800x600@56/60/72/75/85	V	V
1024x768@60/70/75/85	V	V
1280x720@60	V	V
1280x1024@60	V	V
1600x1200@60	V	V
1920x1200@60RB	V	V
3840x2160p@24/25/30	V	V
4096x2160p@24	V	V
4096x2160p@50/60(YUV_420)	V	V
480I/576I	V	V
480P/576P	V	V
720P@50/60	V	V
1080I@50/60	V	V
1080P@50/60	V	V
1080P@24/25/30	V	V

## 9. ACRONYMS

ACRONYM	COMPLETE TERM
CLI	Command Line Interface
DTS	Digital Theater System
DVI	Digital Visual Interface
EDID	Extended Display Identification Data
GUI	Graphical User Interface
HDCP	High-bandwidth Digital Content Protection
HDMI	High-Definition Multimedia Interface
HDTV	High-Definition Television
LCM	Liquid Crystal Module
USB	Universal Serial Bus
VGA	Video Graphics Array
WUXGA	Widescreen Ultra Extended Graphics Array





[www.egerate.com](http://www.egerate.com)

[www.geratech.eu](http://www.geratech.eu)